EDIMAX
NETWORKING PEOPLE TOGETHER

VD-233ED

User Manual

08-2013 / v1.1

- CONTENTS -

Chapter I Introduction 3

1.1 Highlights of your new Network IP Camera 3

1.2 Key feature of this network IP camera include: 4

1.3 Safety Instructions 5

1.4 Packaging Contents 6

1.5 Familiar with your new Network IP Camera 7

1.6 Installation of the Network IP Camera 9

Chapter II Using Network IP Camera by Web Interface 13

2.1 Locate the IP address of Network IP Camera 13

2.2 Connect to IP Camera's Web User Interface and Install ActiveX Plugin 16

2.3 Viewing Live Video 20

2.4 Client Settings 23

Chapter III Advanced Configuration 25

3-1 System 26

3-2 Security 28

3-3 Network 30

3-3-1 'General' setup page 30

3-3-2 'Advanced' setup page 33

3-4 IP Filter 35

3-5 Video 37

3-5-1 Image Setting 38

3-5-2 Video Setting 40

3-5-3 Overlay Setting 42

3-6 Audio 44

3-7 Motion 45

3-8 PTZ Control 47

3-9 Event 49

3-9-1 Settings 50

3-9-2 Media 52

3-9-3 Event Server 53

3-10 Recording to Micro SD Card 57

3-11 SDHC 58

3-12 Log 60

3-13 Device Info 61

3-14 Maintenance 62

3-15 Language 63

Chapter V Troubleshooting 64

Notice According to GNU General Public License Version 2 72

Chapter I Introduction

1.1 Highlights of your new Network IP Camera

This Vandal Dome network camera provides super image quality and remarkable bandwidth efficiency. The camera supports H.264 High Profile, Main Profile, and Baseline Profile video stream compression technology. With H.264 higher video compression performance, the file size of transmitted video stream is extremely reduced so as to optimize the network bandwidth efficiency.

This Vandal Dome network camera has up to 15~20M IR illumination distance. It offers true day/night function to maintain clear images 24 hours a day. The build-in Micro SD card slots provides a convenient and portable storage option for local storage of event and schedule recordings in case of network disconnection.

This Vandal Dome network camera has 3-AXIS design. User can adjust image flat horizontal surface no matter what ceiling point of view.

This Vandal Dome network camera is equipped with PoE (Power over Ethernet) IEEE802.3af, allowing power and signals to be transmitted over the same cable, thus eliminating the need to install a separate power source for each camera.

The digital motion detector feature transmits an alarm signal when moving subjects enter the scene. Together with Edimax central software management software for live view and recording.

1.2 Key feature of this network IP camera include:

- IR Illumination Distance over 15~20 Meters.
- Mechanical IR-Cut Filter Removable.
- Up to QXGA Resolution at 20 FPS.
- H.264 /MPEG4 /MJPEG Multiple Stream Output for Simultaneously Live Monitoring and High Resolution Recording.
- Built-in Micro SD Memory Card Slot for Local Storage.
- Event Management by Motion Detection, Alarm Trigger.
- Support Two Way Audio.
- Support Mobile Phone Remote Monitoring.
- Power over Ethernet.
- WDR support.
- ONVIF Compliant.

1.3 Safety Instructions

Please follow the safety instructions listed below when you're using this Network IP Camera, or you would harm this camera and / or yourself! Also, the warranty will become void if you disobey these safety instructions.

- This Network IP Camera is sophisticated electronic device; do not drop it from high places.
- Do not place this IP Camera at hot / humid places, and avoid direct sunlight.
- This IP Camera is not a toy; keep it out from the reach of children.
- Do not insert any accessories of this IP Camera into your body.
- Make sure lens set is secured when you're using this IP Camera, lens set may fall down if it's not properly secured, and cause damage to human and itself.
- If you want to use this IP Camera at any place that may be spilled by water or dirt, a secure and water-proof camera housing is required.
- Do not pull any cord that is connected to this IP Camera by force.
- IP Camera will become hot after long time of use. Refrain from touch IP Camera with hand, or cover this IP camera with paper or cloth.
- Never connect powered cable to IP Camera's DI/DO contacts.
- If the IP Camera falls into water when powered, do not attempt to retrieve it back by yourself! Find a qualified electric technician for help.

1.4 Packaging Contents

Please check the contents of your new Network IP Camera when you unpack the package. If any item is missing, please contact your dealer of purchase for help.

Item No.	Description	Quantity
1	Network IP Camera	1
2	PU foam pad	1
3	CDROM(User manual, QIG, EdiView 32)	1
4	QIG	1
5	Tools package	1
6	Terminal block(2 pins X1, 5 pins X2)	1

1.5 Familiar with your new Network IP Camera

Item	Description
1.Front Cover	Bubble cover, metal cover.
2.Rear Cover	Metal cover.

Front cover:

Item	Description
1. Bubble Cover	Transparent bubble cover, for lens and LEDs protection.
2. Black inner cover	Inside protection.
3. Anti - drop line	Protective front cover drop during installation.

Rear Cover:

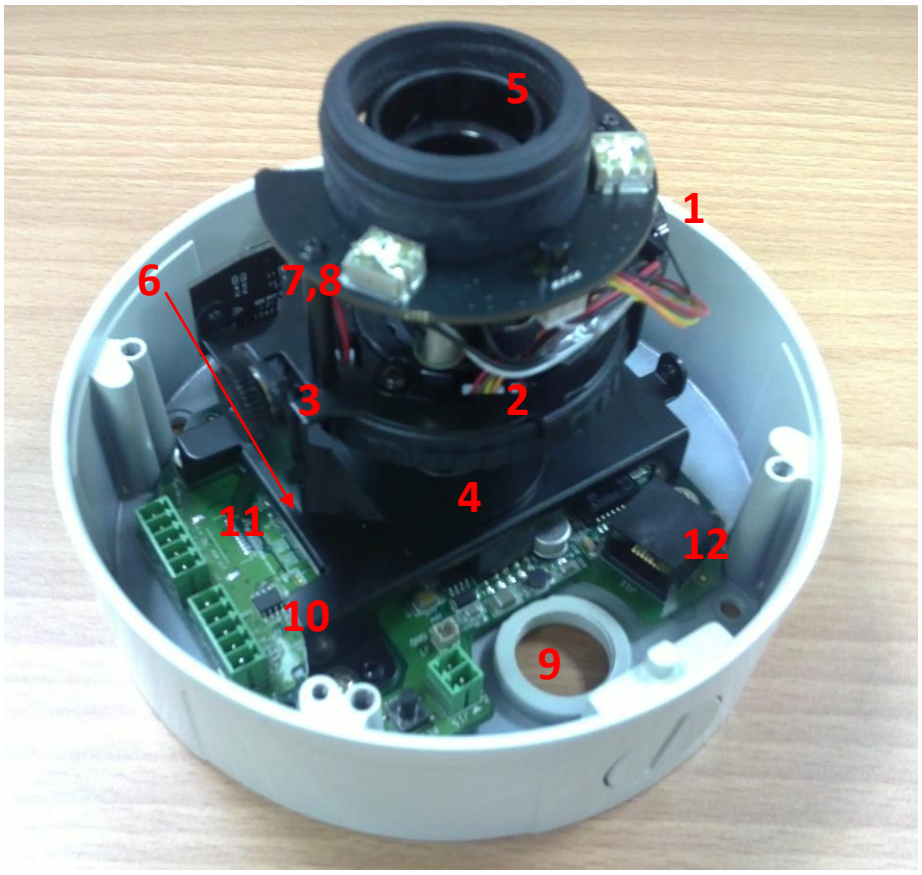

Item	Description
1. IR LED Board	IR illumination
2. Top Mount	For Rotated function
3. Mid Mount	For tilt function
4. Down Mount	For pan function
5. LENS	Vari-focal Lens
6. Main Board	PCBA platform
7. SD Board	Micro SD card slot
8. Reset button	For resetting function (on SD card board)
9. Power Terminal Block	J15, details in Ch 1-1.5
10. GPIO Terminal Block	J17, details in Ch 1-1.5
11. GPIO Terminal Block	J18, details in Ch 1-1.5
12. RJ45 connector	Network connection

1.6 Installation of the Network IP Camera

Please follow the instructions below to setup your new IP camera.

1. Unscrew your front cover by using the tool from the tools package.

2. Attach your PU foam pad on the bottom of your rear cover.

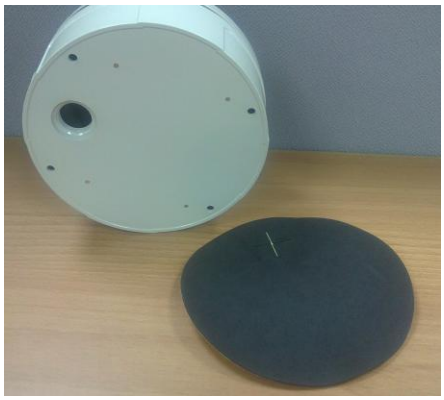

3. Create your GPIO, Power cable with Terminal blocks.

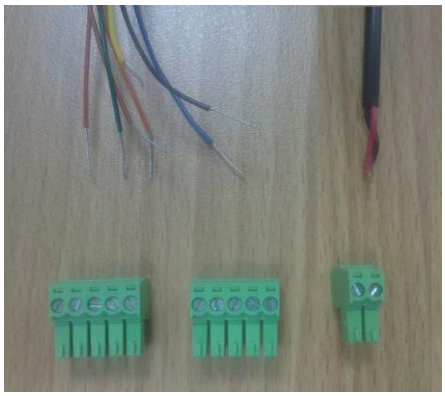

2-1. Please refer to the definition of the terminal blocks chart below. It is also printed on the motherboard.

GPIO Terminal Block (J17, 5pins)	
Pin No.	Function
Pin 1	AGND
Pin 2	Audio Out
Pin 3	Ext MIC In
Pin 4	RS485 D+
Pin 5	RS485 D-

GPIO Terminal Block (J18, 5pins)	
Pin No.	Function
Pin 1	GND
Pin 2	Alarm In1
Pin 3	Alarm In2
Pin 4	Alarm Out
Pin 5	GND

Power Terminal Blocks (J15, 2pins)	
Pin No.	Function
Pin 1	DC 12V
Pin 2	GND

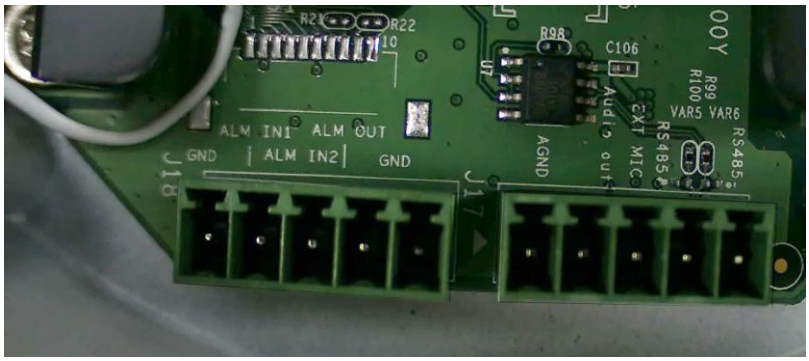

4. Insert all your cables through the conduit hole (optional A or B). If necessary, use the standard M20x15 water proof straight plug to prevent the device from water or dirt. Or the other equivalence plug to assembly. (See Appendix I)

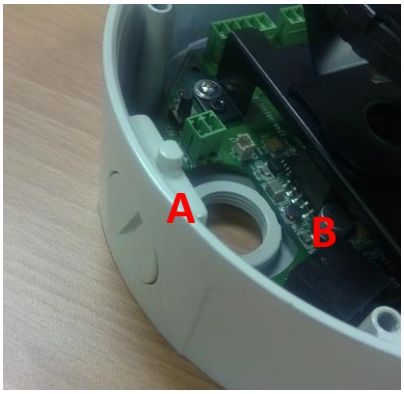

5. Connect all your cables to their respective terminals. Insert your micro SD/SDHC card for option. Please see the location refer to the chart in chapter 1-1.4.

6. If this camera is connected to a PoE switch then the device can be powered on without using the power adapter.
7. Repower on the camera and refer to the following procedures in chapter 2 to access and configure it.

8. If everything works fine, you can put the camera on the wall or ceiling by using the screw in the tools package.

9. If local storage is required then insert micro SD card in the slot then the camera can detect the card and enable the UI of SD card.

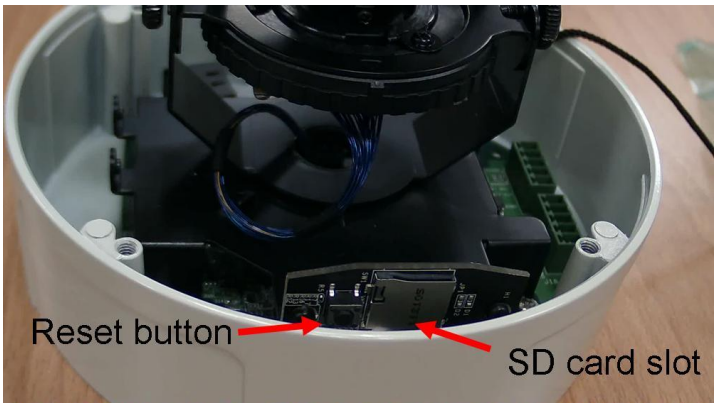

10. See the above image and find the location of reset button on the SD card board. Press the button 0ver 10 seconds to reboot the device when needed.

Chapter II Using Network IP Camera by Web Interface

2.1 Locate the IP address of Network IP Camera

You can use your new Network IP Camera by its web user interface via web browser. Currently the viewing system requirement for Network IP camera is:

- OS: Microsoft Windows XP/Vista/7
- Browser: IE7, 8, 9 (32Bit)
- Cell phone: 3GPP player

Note: *For best viewing experience we recommend that you use Microsoft Windows Internet Explorer 7, 8, or 9.*

By default, the network camera automatically obtains an IP address from the DHCP server on your local network. Check your DHCP server's IP address lease table to find the network camera's IP address, or use the EdiView Finder utility included in the CD.

Note: *We recommend that you use Microsoft Windows to install your network camera -* ***Mac is not supported****.*

1. Insert the CD into your CD-ROM drive. When the wizard appears, click "Setup Utility" to install the "EdiView Finder" software.

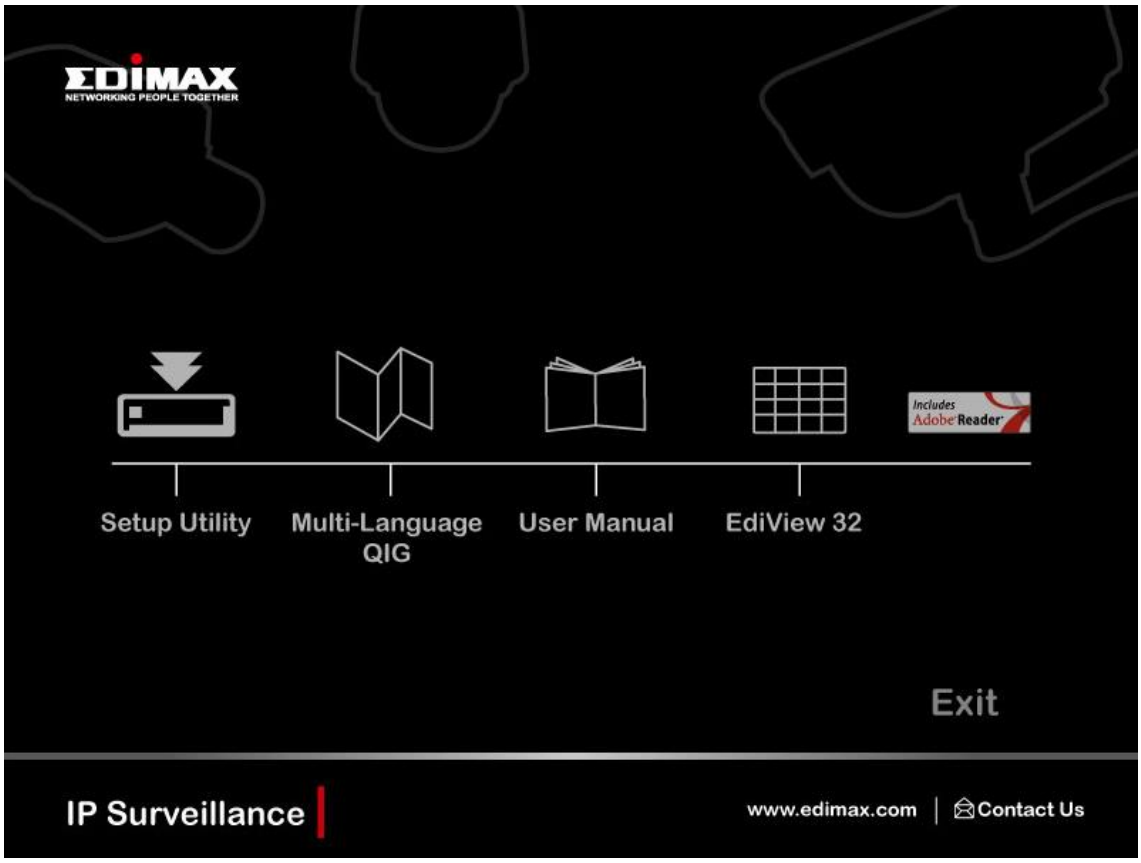

Note: *The contents of the CD-ROM can also be downloaded from the Edimax website: http://www.edimax.com/en/index.php*

2. After the installation is complete, double-click the “EdiView_Finder” icon to execute the application.

3. Press ‘Discover’ button to search for all IP Cameras on your local network (make sure all IP Cameras are powered on and connect to local network first). When you find any IP Camera, you can double click on it or click ‘Link’ button to connect to it by your web browser.

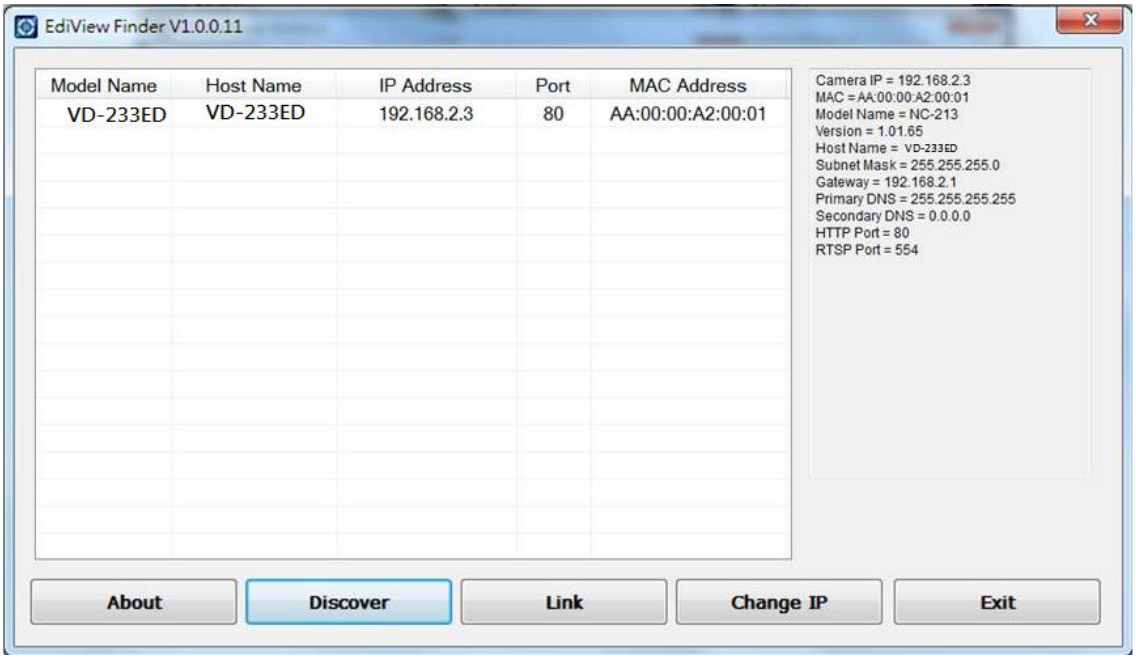

If you need to change a certain IP Camera's IP address, you can also click on the IP Camera you wish to change IP address, then click 'Change IP' button to change select IP Camera's IP address setting.

If you no longer need to use this utility, click 'Exit' button to close it.

Please note:

If you have several network connections, such as "Wireless Function", please disable the "Wireless Functions" or / and other network connections that is not connected to IP camera,, or IP finder may fail to search IP camera!

2.2 Connect to IP Camera's Web User Interface and Install ActiveX Plugin

When you know the IP address of IP Camera, you can connect to it by Internet Explorer web browser by entering its IP address in address bar. The use login screen will appear when you get connected:

Windows Security
The server 192.168.2.3 at VD-233ED requires a username and password.
Warning: This server is requesting that your username and password be sent in an insecure manner (basic authentication without a secure connection).
admin
1234
Remember my credentials
OK
Cancel

IP Camera's administrator username and password are both 'admin' (lower case) by default. Click 'OK' button or press 'ENTER' key on your keyboard when you finish entering username and password.

When you connect to IP Camera for the first time, you'll see the following message. This message prompts you that you need to install ActiveX plug-in before you can see the video from IP Camera.

For IE 8:

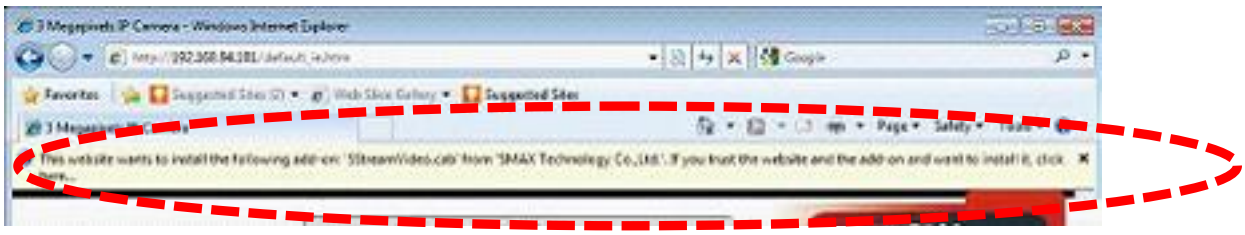

Right click the indication bar and click:''Install This Add-on for All Users on This Computer…' to install ActiveX plugin.

For IE 9:

Stream H.264
Digital Output
ON
OFF
Client Settings
Configuration
Language
This is a plugin actives. If you see this text, it means either your browser does not support actives or has disabled it.

Click 'Install' button located at the bottom of IE to install ActiveX plugin.

If you're prompted that:
'Windows Firewall has blocked some features of this program'

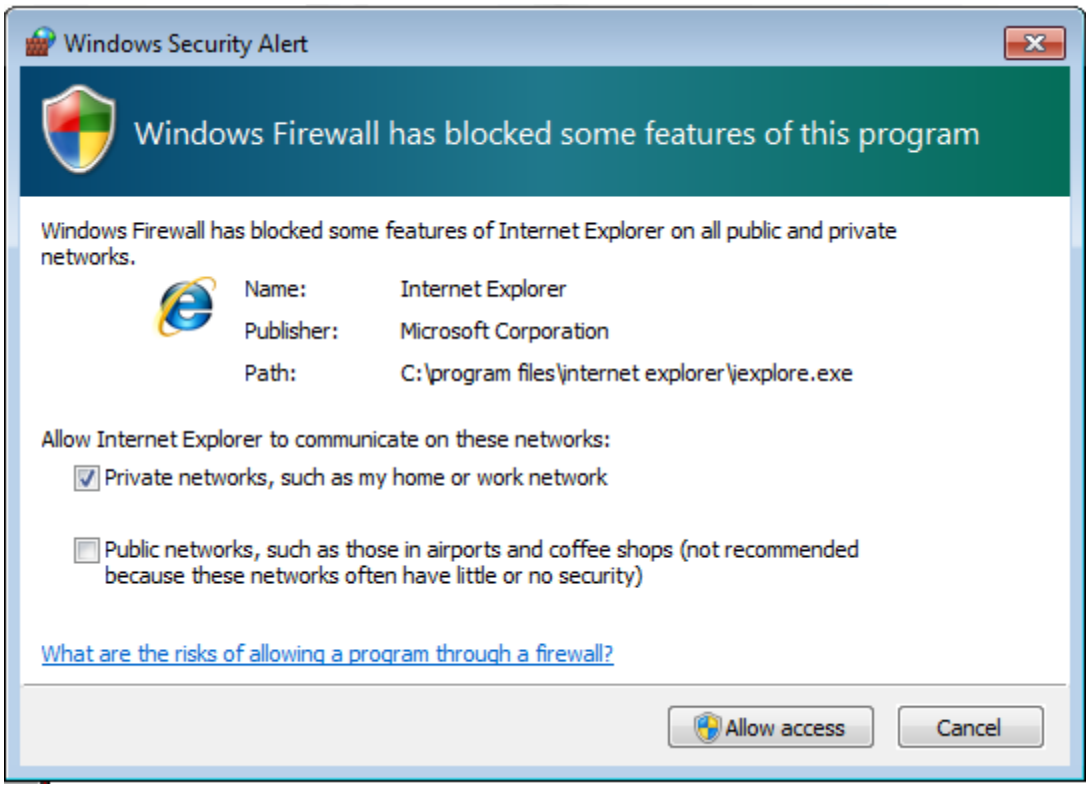
Windows Security Alert
Windows Firewall has blocked some features of this program
Windows Firewall has blocked some features of Internet Explorer on all public and private networks.
Name: Internet Explorer
Publisher: Microsoft Corporation
Path: C:\program files\internet explorer\iexplore.exe
Allow Internet Explorer to communicate on these networks:
Private networks, such as my home or work network
Public networks, such as those in airports and coffee shops (not recommended because these networks often have little or no security)
What are the risks of allowing a program through a firewall?
Allow access
Cancel

Click 'Allow access', or IP Camera will not be able to function properly.

When you're installing Internet Explorer plugin, you may also be prompted that if you want to allow changes to be made to your computer:

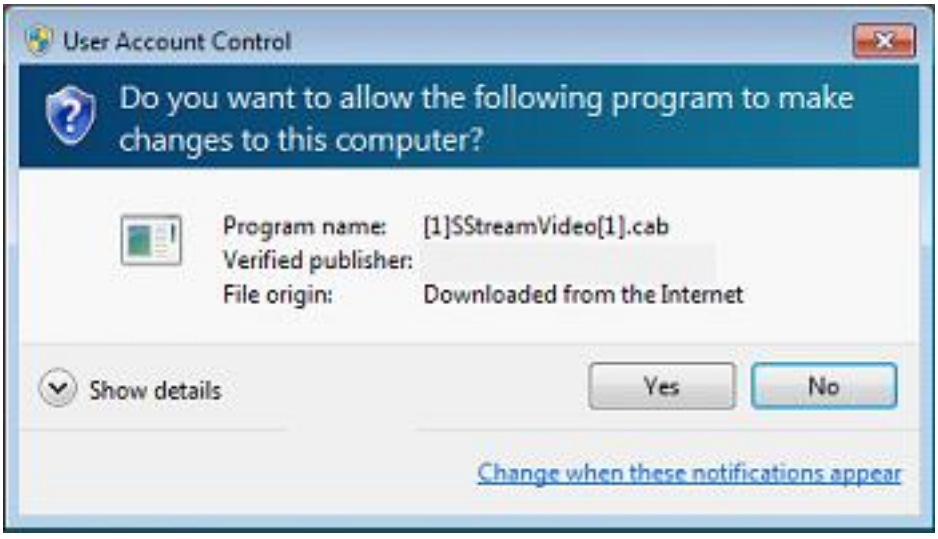
User Account Control
Do you want to allow the following program to make changes to this computer?
Program name: [1]SStreamVideo[1].cab
Verified publisher:
File origin: Downloaded from the Internet
Show details
Yes
No
Change when these notifications appear

Click 'Yes' to allow changes.

After ActiveX plugin is installed, you should be able to see the video stream from camera.

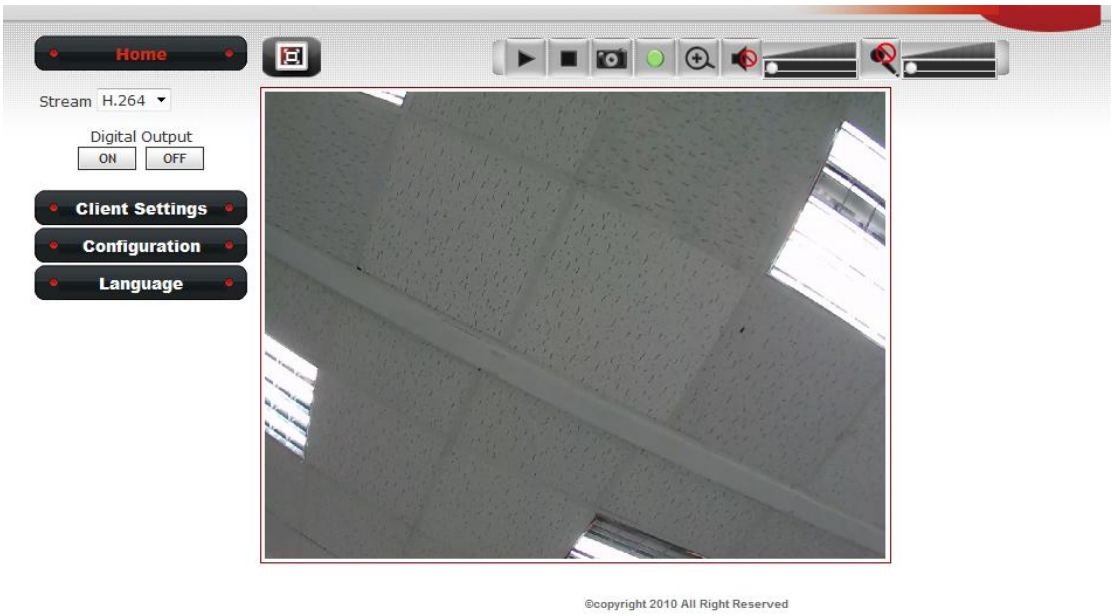

NOTE:
If this is the first time you use this IP Camera, you can refer to chapter 2.4 for instructions on Setup Wizard, which will guide you to complete the software setup of your new IP Camera.

2.3 Viewing Live Video

After ActiveX control is installed, you can view IP camera's video by web browser. Just connect to IP camera by web browser and login, then you can see live video from IP camera:

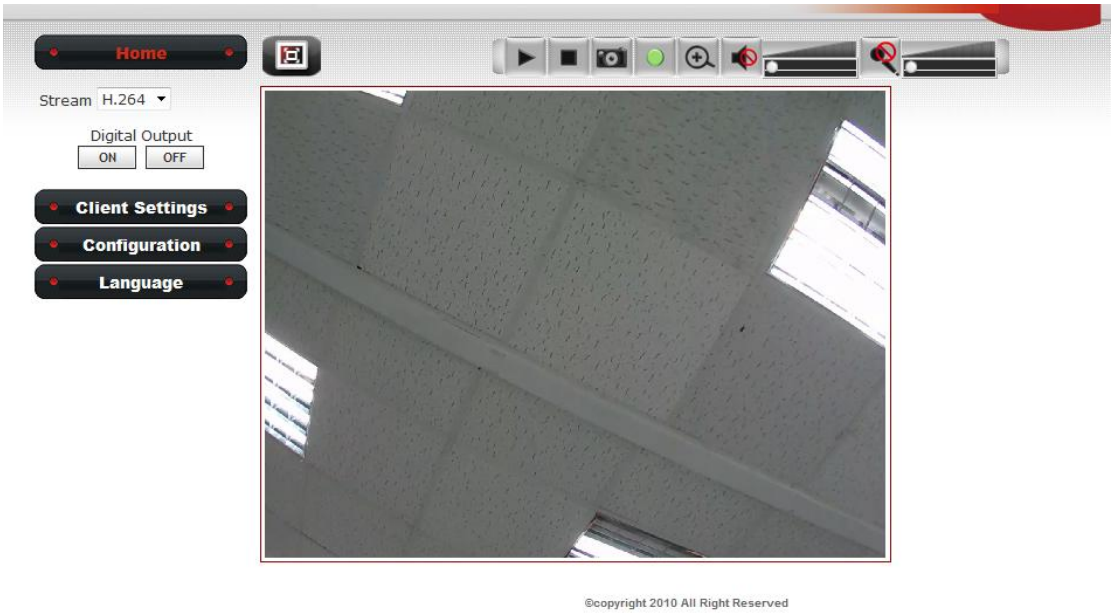

There are various controls on web page, here are descriptions of every control item:

Item	Description
'Home' button	This button is visible in all setup pages of IP camera, and you can go back to live video view by clicking this button when you're in other page.
Stream	Select video stream type: H.264 or MJPEG. H.264 required less network bandwidth and this will help when network connection is slow.
Digital Output (ON / OFF)	Switch digital output interface on or off.
Client Settings	Open 'Client Setting' menu.
Configuration	Open 'Configuration' menu.
Language	Open language menu, you can switch web interface to other language. Available languages: English, Simplified Chinese, Traditional Chinese
Original size / Fit screen	Switches live image view between original size (full size: 3M pixels) and fit screen (smaller size).

/	If you want to see video in detail, switch to original size. If your computer monitor's resolution is not enough and you want to see full image view, switch to fit screen and image size will adjust automatically.
'Connect' button	Start live video view.
'Disconnect' button	Stop live video view.
'Snapshot' button	Take a snapshot or camera video and save image file on your computer. When you click this button, a new window will appear: Click 'Save' button when you see the image you wish to save, and you'll be prompted to indicate the folder on your computer to save image file. If you changed your mind and don't want to save image file, click 'Cancel'.
'Start Video Record' button	Click this button to record video and save video file on your computer. You'll be prompted to indicate the folder on your computer to save video file.
'Enable Digital Zoom' button	This function will enlarge video view digitally from 1X to 10X, so you can see objects in video in detail. *Please note: that digital zoom uses computer algorithm to enlarge the video and some details may lost. If you need to focus on detail of specific objects in video view, please use optical zoom ring on lens set of IP camera.*
Enable / Disable mute button /	When mute is enabled ( ), you will not hear the voice from IP camera; If you want to hear voice from IP camera, click this button to disable mute ( ). You can drag the slide bar ( ) beside enable/disable mute button to adjust audio playback

	volume.
Start / Stop talk Button /	Start or stop playing your voice through IP camera's audio output. When talk is stopped, people at IP camera will not hear you. Please note: you need a microphone connected to your computer, and computer's mixer setting must enable microphone recording, or nothing will be outputted by IP camera.

2.4 Client Settings

In ‘Client Settings’ menu, you configure basic IP camera settings like data transfer protocol and data storage folder.

To access ‘Client Settings’ menu, click ‘Client Settings’ button on the left.

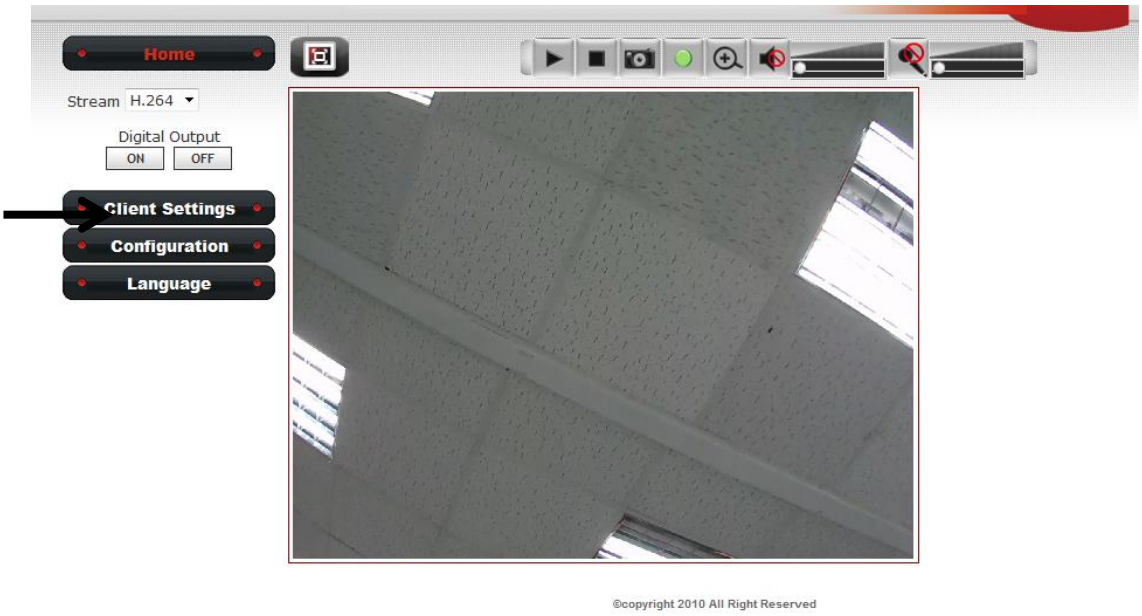

The following screen will appear:

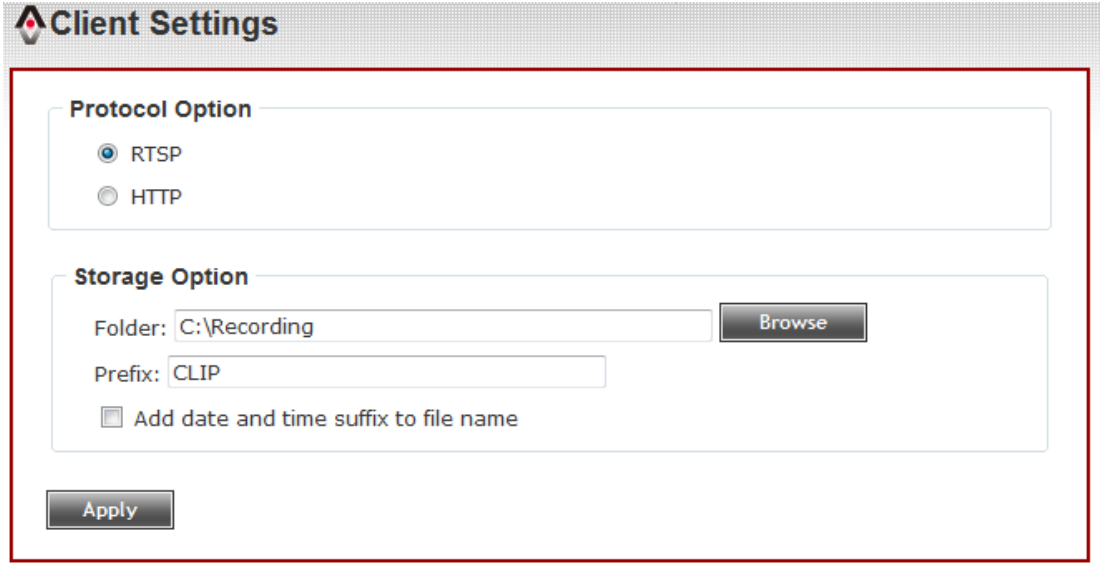

Here are the descriptions of every setup item:

Item	Description
RTSP	Select this option to use RTSP (Real-Time Streaming Protocol) to transfer video data. This protocol allows for more real-time audio and video streams. However, network packets may be lost due to network burst traffic and images may be broken.
HTTP	Select this option to use HTTP (Hyper-Text Transfer Protocol) to transfer video data. If you don't know which one you should use, select 'RTSP'.
Folder	Select a folder on your computer to save recorded video. Click 'Browse' button and you'll be prompted to select a folder.
Prefix	When saving video files, the characters you typed in 'Prefix' field will be used as leading characters of video file's name. For example, the default setting of 'Prefix' is 'CLIP', and video file's named will be 'CLIPxxxx', where xxxx is a 4-digit serial number.
Add date and time suffix to file name	Check this box to add data and time to the ending part of video file's filename, so you can see the date and time the video file is created directly from its filename.

When you finish with above settings, click 'Apply' button to save changes.

Chapter III Advanced Configuration

If you wish to configure IP camera's settings, you can access IP camera's 'Configuration' menu, which provides various kinds of system setting.

To access configuration menu, click 'Configuration' button on the left.

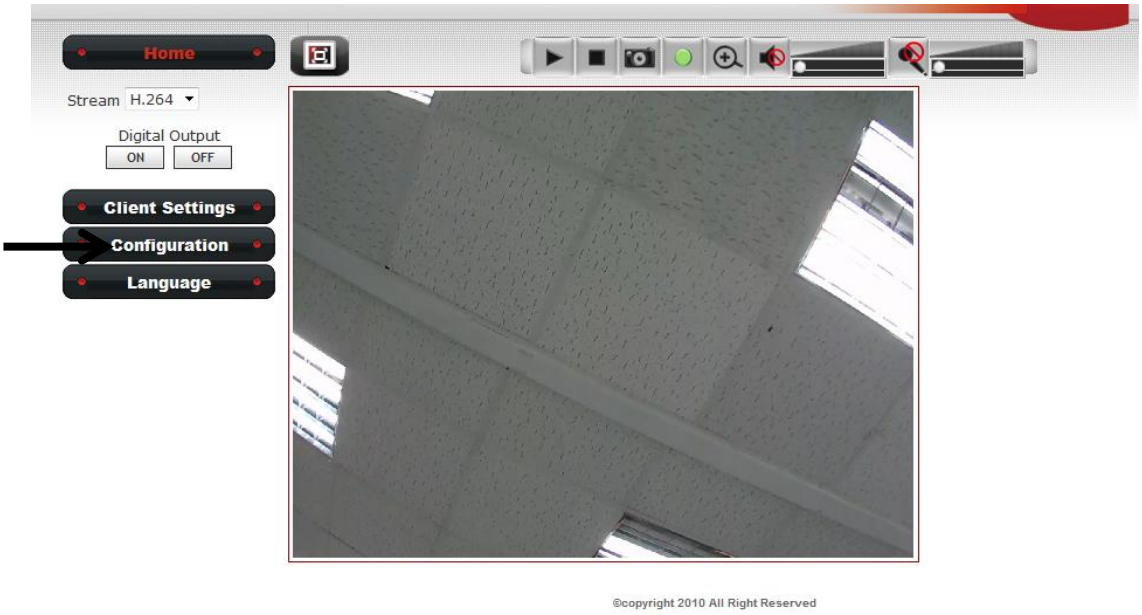

The 'Configuration' submenu will appear, please pick a setup item you wish to configure.

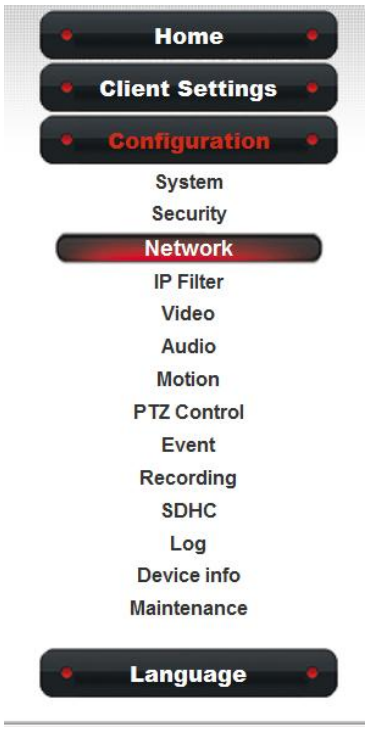

3-1 System

In this menu, you can configure basic IP camera settings like hostname and time.

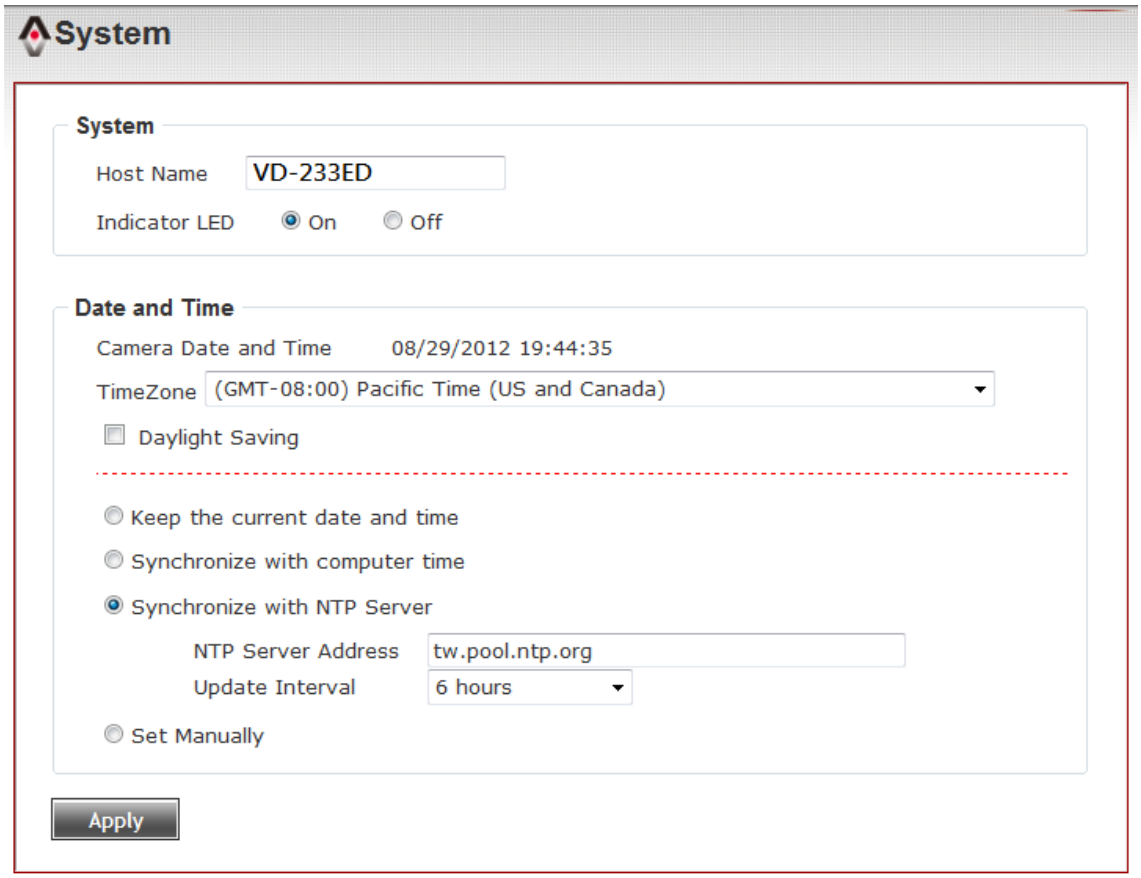

Here are the descriptions of every setup item:

Item	Description
Host Name	Input the IP camera's hostname here, it can be any meaningful words or characters that will help you to identify this IP camera. You can use IP camera's installation location as host name, and this will help you to identify IP camera when you have many IP cameras installed.
Indicator LED	The LED lights located at the back of IP camera is switched on by default. But, if you don't want other people to know the status of this IP camera (so they will know this IP camera is operating etc.), you can select 'Off' and LED lights will be switched off.
Timezone	Select the time zone of residence from dropdown menu to keep correct date and time.

Daylight Saving	If the area you live uses daylight saving, check this box; otherwise do not check this box to keep time correct.
Keep the current date and time	Select this option and date / time setting will not be changed when you click 'Apply' in the page. You can check 'Camera Date and Time' item in this page to know IP camera's current date and time setting.
Synchronize with computer time	Select this item and IP camera will use your computer's time as its time.
Synchronize with NTP Server	Select this item and IP camera will keep its date and time setting synchronized with specified time server (NTP server). Please input NTP server's IP address or host name in 'NTP Server Address' field, and select time update interval from 'Update Interval' dropdown menu. *Please note that if this IP camera can't access Internet, you must have a time server on local area network, or set the time manually.*
Set Manually	Set IP camera's date and time manually. Please set current date and time by 'Date' and 'Time' dropdown menu.

When you finish with above settings, click 'Apply' button to save changes.

3-2 Security

In this menu, you can configure IP camera's login account.
There are three kinds of account:

- Administrator (Can view IP camera's video and make changes of camera setting)

- User (Can view IP camera's video and see LOG, and change Client Setting and language)

- Guest (Can view IP camera's video , and change language)

There can be multiple users, but only one administrator is allowed, and you can't change administrator's user name (it will always be 'administrator').

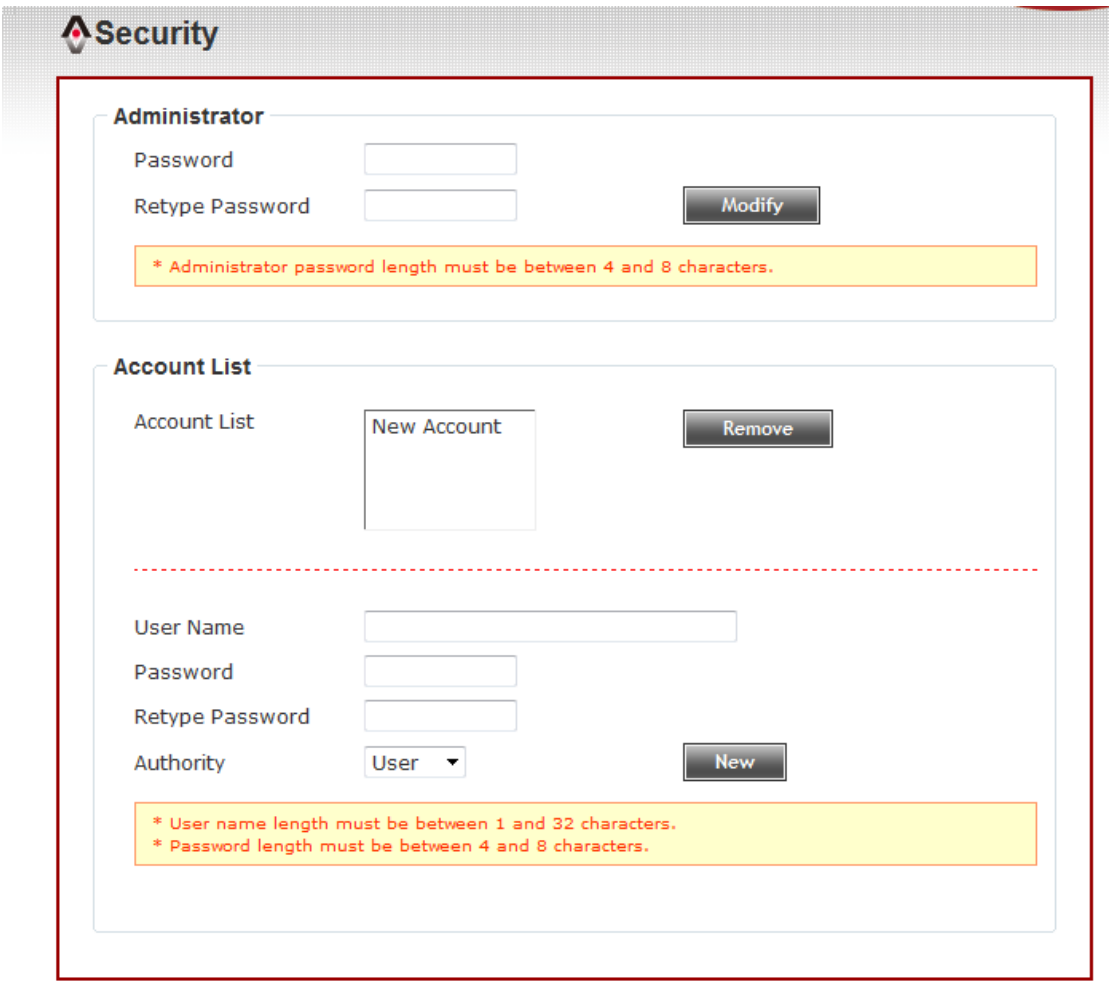

Here are the descriptions of every setup item:

Item	**Description**
Password / Retype Password **(Administrator)**	Input administrator's new password in both 'Password' and 'Retype Password' field, and click 'Modify' button to change administrator's password. *Please note: Don't forget administrator's password! Or you'll need to reset IP camera's all settings to get administrator's password recovered.*
Account List	Here lists all users existed in IP camera. If you want to remove one user, click it in the list, and then click 'Remove' button. *If no user is existed, 'New Account' message will be shown here.*
User Name	Input new user's username here. User name must be greater than 1 character and less than 32 characters.
Password / Retype Password	Input this user's password in both 'Password' and 'Retype Password' field.
Authority	To define this user's access privilege, select 'User' or 'Guest' in dropdown menu. When you finish inputting new user's information, click 'New' button to create a new user.

3-3 Network

In this menu, you can configure IP camera's network setting.

3-3-1 'General' setup page

Setup IP address for this IP camera. This IP camera supports both IPv4 and IPv6 IP address.

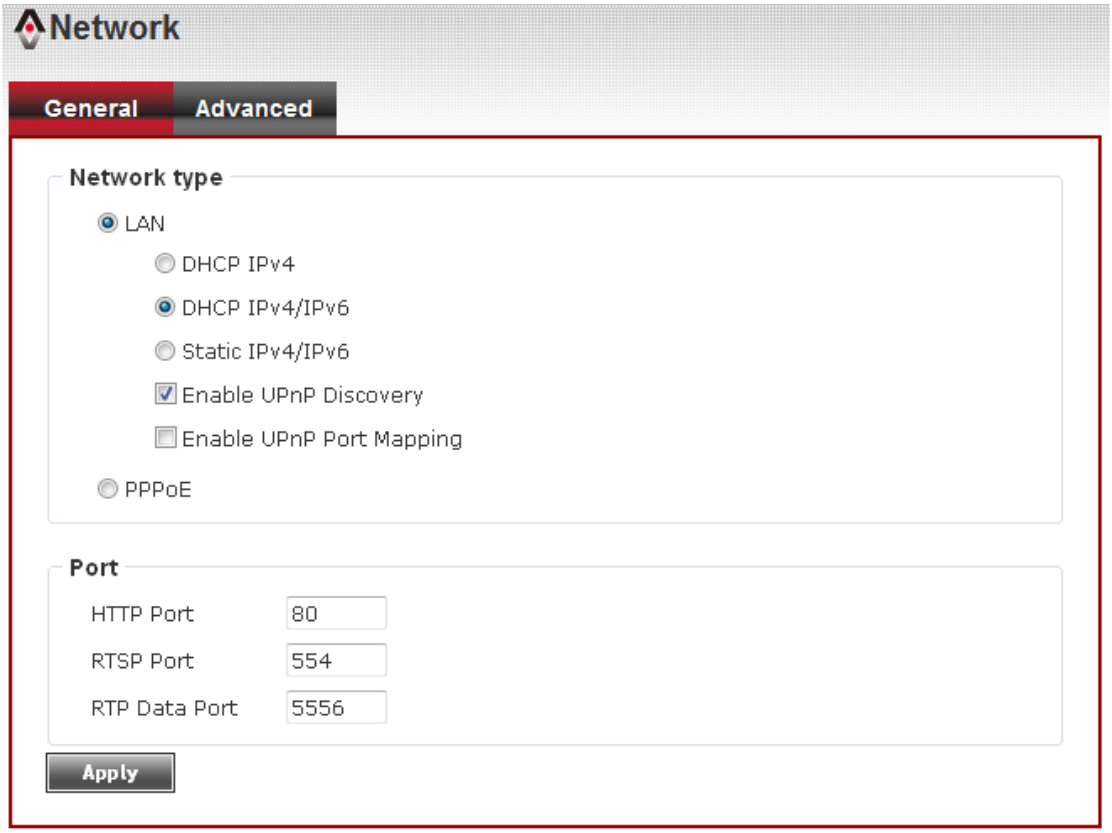

Here are the descriptions of every setup item:

Item	Description
LAN	Select this option to assign an IP address to LAN port (or obtain an address from DHCP server automatically). Available options are: DHCP IPv4: Obtain an IPv4 IP address from DHCP server on LAN automatically.

	DHCP IPv4 / IPv6: Obtain both IPv4 and IPv6 address from DHCP server on LAN automatically. Static IPv4 / IPv6: Assign an IPv4 / IPv6 address to IP camera manually. If you don't have a DHCP server on your local area network, you must use this option to specify an IP address. IP Address(IPv4): Input IPv4 IP address* IP Address(IPv6): Input IPv6 IP address* Prefix Length: Input IPv6 IP address' prefix length (0-128) Subnet Mask: Input subnet mask Gateway: Input gateway address Primary DNS: Input DNS server's IP address Secondary DNS: Input backup DNS server's IP address, you can leave this field blank. * You can leave this field blank, if you only wish to use IPv4 or IPv6 IP address. Enable UPnP Discovery: Check this box to enable other devices on network to discover the presence of this IP camera by UPnP. It's recommended to enable this function. Enable UPnP Port Mapping: When UPnP is enabled, check this box to enable UPnP's port mapping.
PPPoE	Select this option to use PPPoE to connect to network. You have to input PPPoE username and password assigned by network operator to get connected.
HTTP Port	Input IP camera's web connection port number here. When this port number is changed, you need to change web browser's port number you used to connect to IP camera. For example, IP camera's IP address is 192.168.2.3, and if you changed HTTP port number to 82, please input 'http://192.168.2.3:82' in web browser's address bar to access IP camera's web configuration interface.
RTSP Port	Input RTSP port number. When this port number changes, you

	must change corresponding settings in external network devices (NVR or CMS software) so they can receive this IP camera's video.
RTP Data Port	Input RTP data port number here.

When you finish with above settings, click 'Apply' button to save changes.

3-3-2 'Advanced' setup page

You can setup advanced network settings in this page. This page is intended for advanced settings only, and this IP camera will work fine even you don't make any changes to this page.

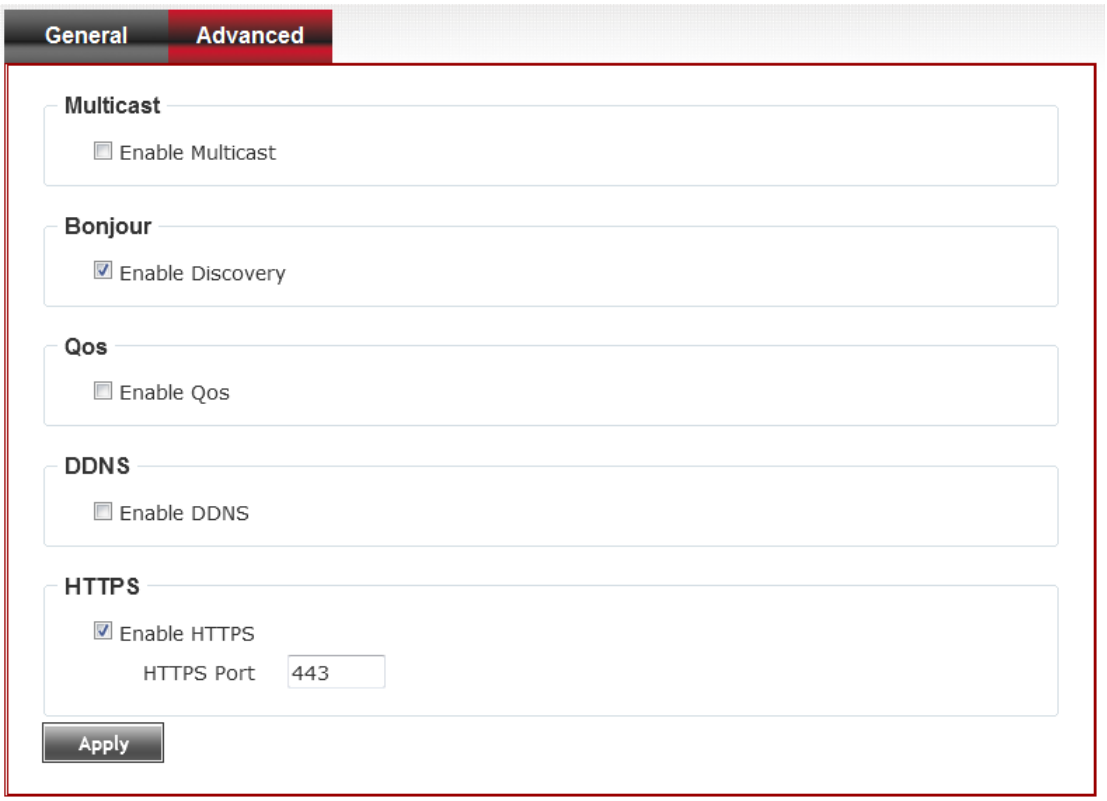

Here are the descriptions of every setup item:

Item	Description
Multicast	Enable video multicast: Multicast Group Address: Input multicast group address here, must be an address between 232.0.0.0 to 232.255.255.255. Multicast video port: Input port number for video multicast here. Multicast RCTP video port: Input port number for RCTP video here.

	Multicast audio port: Input port number for audio here. Multicast RCTP audio port: Input port number for RCTP audio here. Multicast TTL: Input TTL value for multicast here.
Bonjour	If you're using MacOS and you have Bonjour installed, you can use it to discover this IP camera.
QoS	Enable QoS to improve the data transfer priority of this IP camera (Your local area network must support QoS). You can select Video / Audio's QoS DSCP value (0 to 63), or both video and audio.
DDNS 	Enable DDNS support if your ISP assigns dynamic IP address to you. You must register a dynamic IP service first. Currently this IP camera supports Dyndns, TZO and No-IP dynamic IP service. Provider: Select dynamic IP service provider. Host Name: Input the host name you obtained from dynamic IP service provider. User name: Input user name used to login dynamic IP service provider. Password: Input the password used to login dynamic IP service provider. *The user name and password should be under 16 characters.
HTTPS	Check 'Enable HTTPS' box to enable HTTPS channel to encrypt transferred data. You can also define HTTPS port number in 'HTTPS Port' field if you don't want to use default value '443'.

When you finish, click 'Apply' to save changes.

3-4 IP Filter

When this IP camera is directly connected to Internet and not protected by firewall, this function acts like a mini built-in firewall to protect the safety of this IP camera and avoid attacks from hackers.

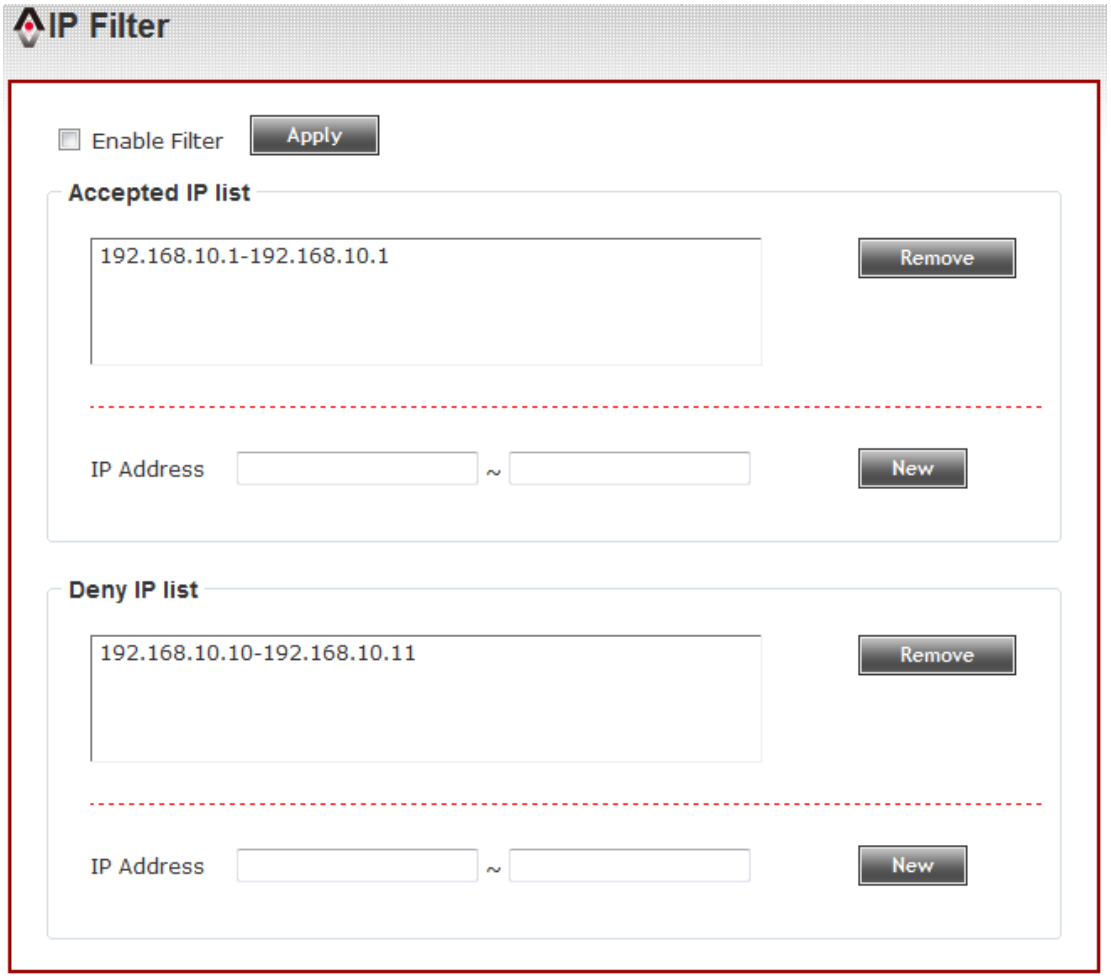

Here are the descriptions of every setup item:

Item	Description
Enable Filter	Check this box to enable IP address filter, uncheck this Box to disable this function.
Accepted IP list	Here lists all IP address that can build connections to this IP camera. If you want to remove a set of IP address from the list, click on the IP address and click 'Remove' button.
IP Address (Accepted IP list)	Input the starting and ending IP address of IP address you wish to accept connections here. IP camera will only accept connections established from these IP address. If you want to specify one IP address only, input the same IP address in both field.

	Click ‘New’ button to add IP address into accepted IP list.
Deny IP list	Here lists all IP address that cannot build connections to this IP camera. If you want to remove a set of IP address from the list, click on the IP address and click ‘Remove’ button.
IP Address (Accepted IP list)	Input the starting and ending IP address of IP address you wish to deny connections here. IP camera will deny connections established from these IP address. If you want to specify one IP address only, input the same IP address in both field. Click ‘New’ button to add IP address into deny IP list.

When you finish with above settings, click ‘Apply’ button to save changes.

3-5 Video

You can adjust the image of the IP camera in this menu.

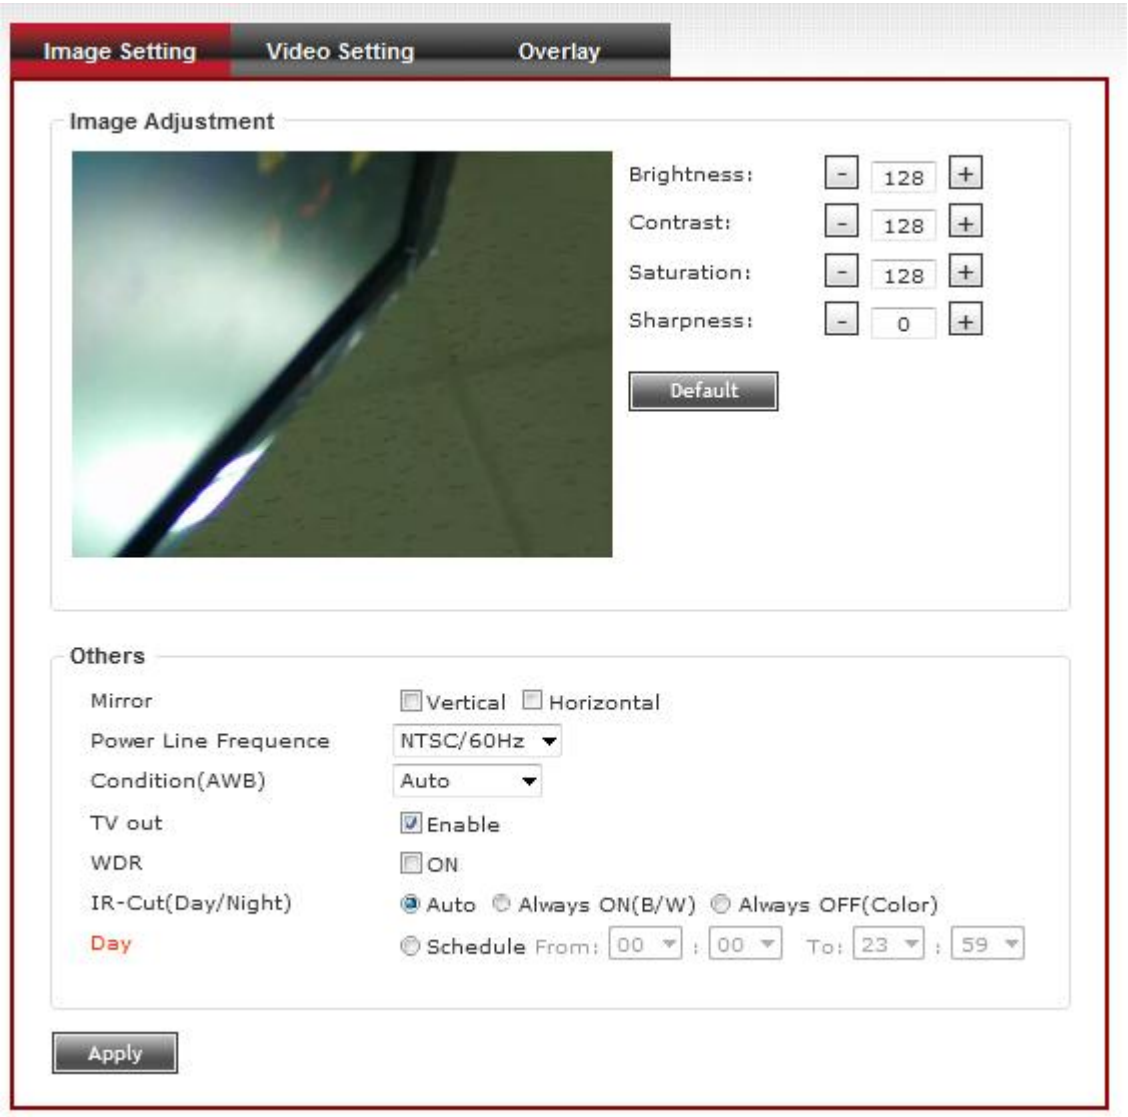

There are 3 sub-menus in this menu: Image Setting, Video Setting, and Overlay, which can be accessed by tabs on the top:

3-5-1 Image Setting

You can adjust the image parameters in this page.

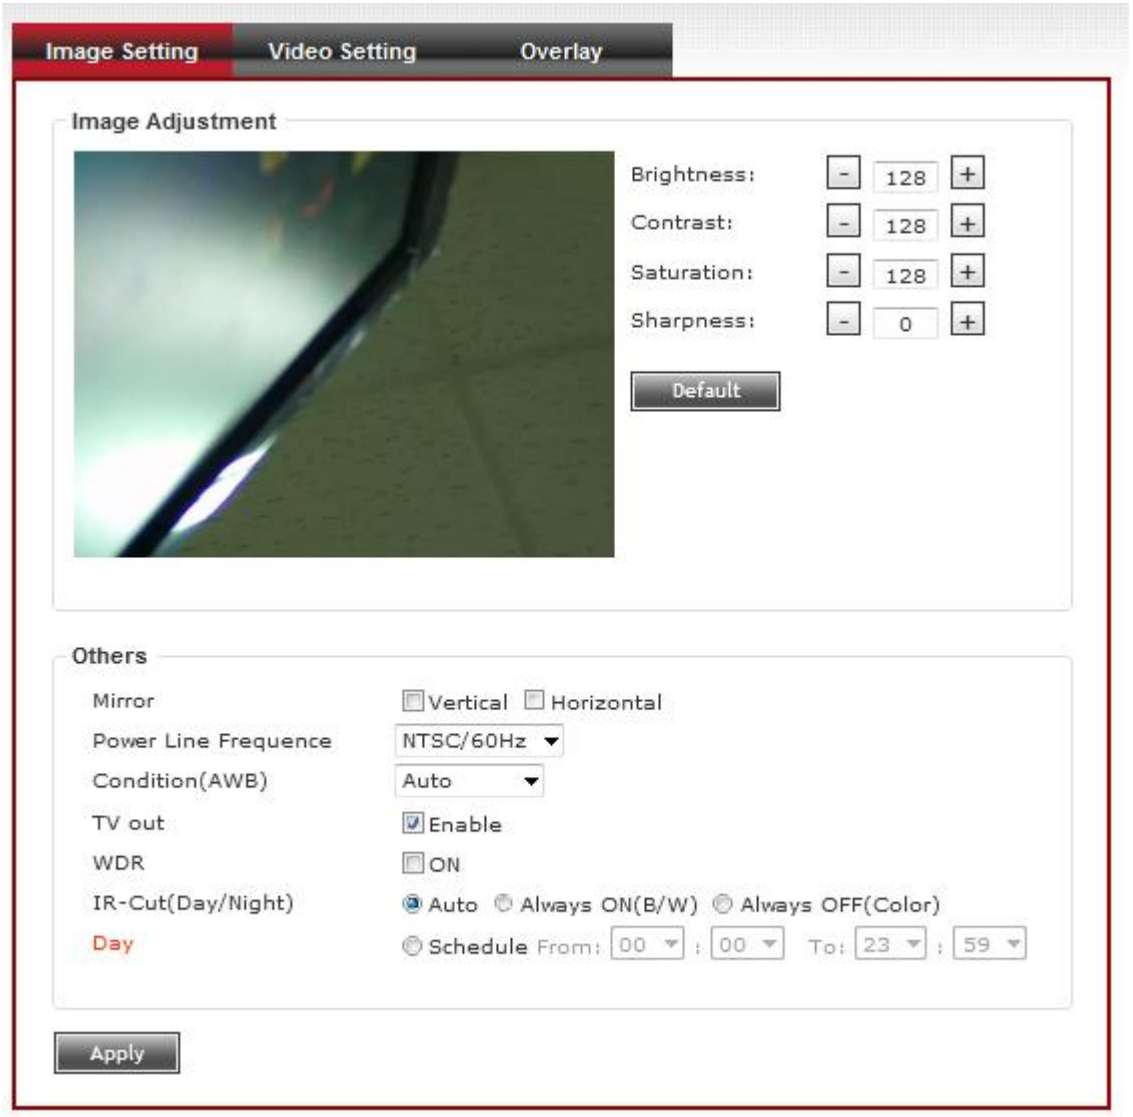

Here are the descriptions of every setup item:

Item	Description
Brightness / Contrast / Saturation / Sharpness	Control the image parameters. Click ‘ - ‘ to decrease value, or click ‘ + ‘ to increase value. You can also input the value in the field directly.
Default	Set all above values to default value ‘128’.
Mirror	Check ‘Vertical’ or ‘Horizontal’ box to flip the image vertically or horizontally, this will help to correct the orientation of image when IP camera is hanged bottom-up by camera holder. *You can click both ‘Vertical’ and ‘Horizontal’ box at the same time.*

Power Line Frequency	Select the frequency of power line of the place you're using this IP camera. This will help to reduce the flicker of certain lights in the image.
Condition (ABW)	Select the condition that you'll be using this IP camera from dropdown menu. - Outdoor: Outdoor environment using. - Auto: IP camera will adjust its parameters automatically. - Night: You'll be using this IP camera in dark places where lights are insufficient. - Tungsten: Low color temperature environment using.
WDR	Wide Dynamic Range: The function is intended to provide clear images even under back light circumstances where intensity of illumination can vary excessively, namely when there are both very bright and very dark areas simultaneously in the field of view of the camera. WDR enables the capture and display of both bright and dark areas in the same frame, in a way that there are details in both areas, i.e. bright areas are not saturated, and dark areas are not too dark.
IR-cut (Day/Night)	An IR-cut filter is built in this IP camera to reduce the effect of IR lights (which will change the color of image and makes it looks different than what you see through your eye), and most of IR lights are coming from sunlight. You can select the behavior or IR-cut filter: - Auto: IR filter will act automatically. If you don't know if you should use IR filter, select this option. - Always ON(B/W): IR filter is always on. - Always OFF(Color): IR filter is always off.
Day	The IR-cut (Day/Night) function above is the main Day/Night setting. This vandal dome camera supports user to set the Day time manually here. User can define the timing of switching IR filter as need.

When you finish with above settings, click 'Apply' button to save changes.

3-5-2 Video Setting

You can adjust the video transfer parameters in this page.

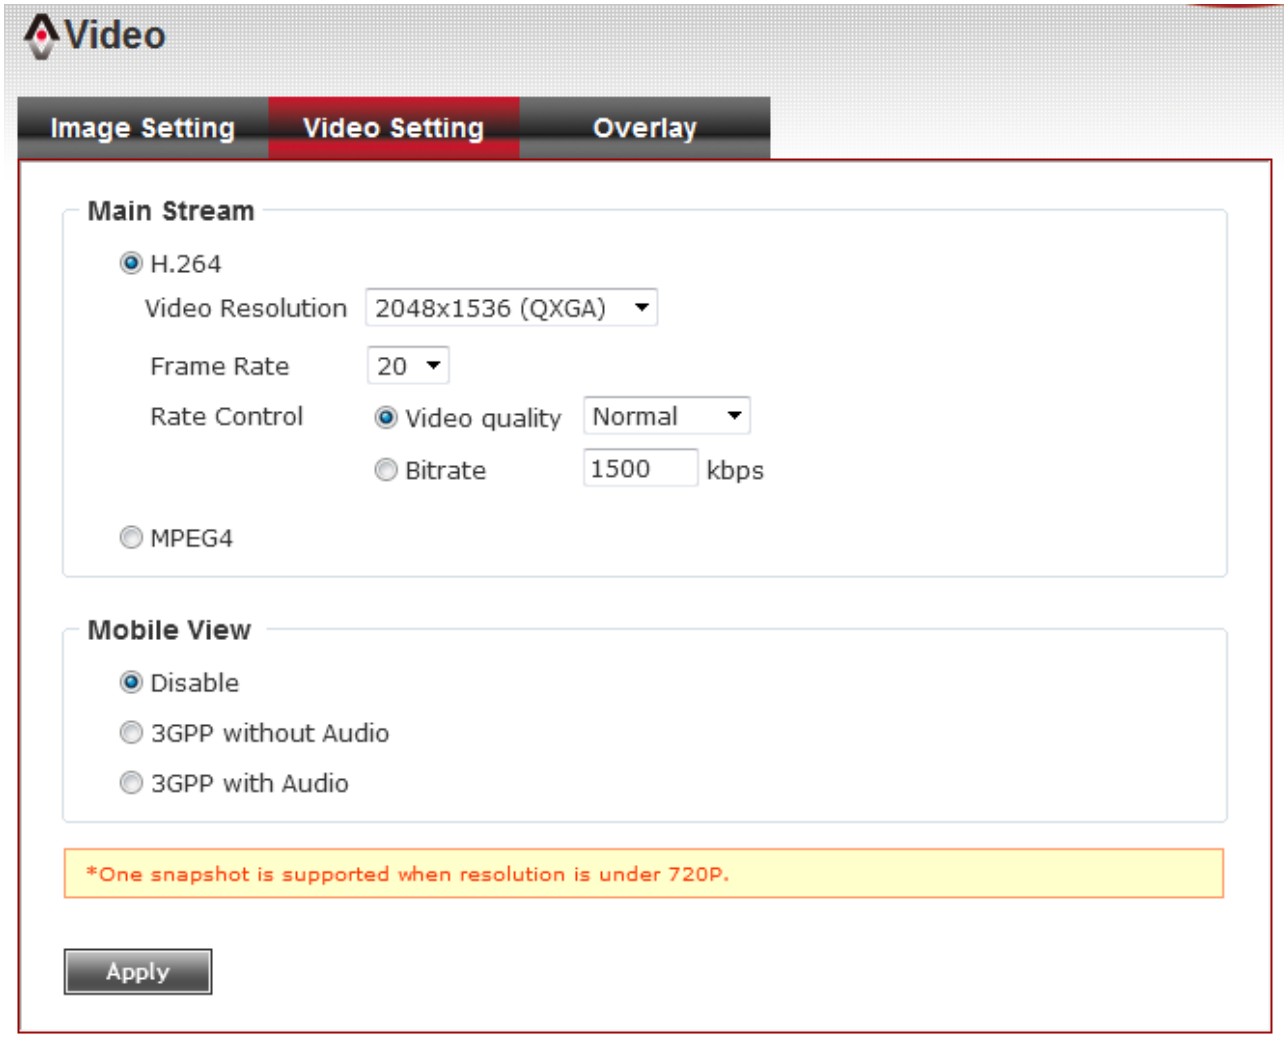

Here are the descriptions of every setup item:

Item	Description
H.264 /MPEG4	Select the compression of main stream: H.264 / MPEG4.
Video Resolution	Select video resolution. - H.264: 2048x1536 (QXGA) / 1920x1080 (1080p) 1280x960 (960p) / 1280x720 (720p) 720x480 (D1) / 640x480 (VGA) 320x240 (QVGA) - MPEG4: 1920x1080 (1080p) / 1280x960 (960p) 1280x720 (720p) / 720x480 (D1) 640x480 (VGA) / 320x240 (QVGA) MJPEG: 1280x720 (720p) / 720x480 (D1)

	640x480 (VGA) / 320x240 (QVGA) Please note that some video resolution is not available when video encoder is 'MPEG4'. When network speed is insufficient, select a lower video resolution will help.
Frame Rate	Select video frame rate. Please note that some frame rate is not available when video encoder is 'H.264'. When network speed is insufficient, select a lower frame rate will help.
Rate Control	Select video bit rate. You can control bit rate by both 'Video quality' and 'Bitrate': - Video quality: There are 5 levels of video quality, select 'very high' to improve video quality but consumes more network bandwidth, and select 'very low' will decrease video quality and consumes less network bandwidth. - Bitrate: Input video's bit rate directly. It must an integer between 512 and 4000. Higher bit rate provides better video quality, but consumes more network bandwidth.

When you finish with above settings, click 'Apply' button to save changes.

Note: *MJPEG options are only available for portable devices like cell phone.*

The 'Mobile View' is used to enable cell phone monitoring function. From Yr2012 the IP camera is able to support iPhone series, and this information will be modified without prior notice.

3-5-3 Overlay Setting

You can adjust the video overlay parameters in this page.

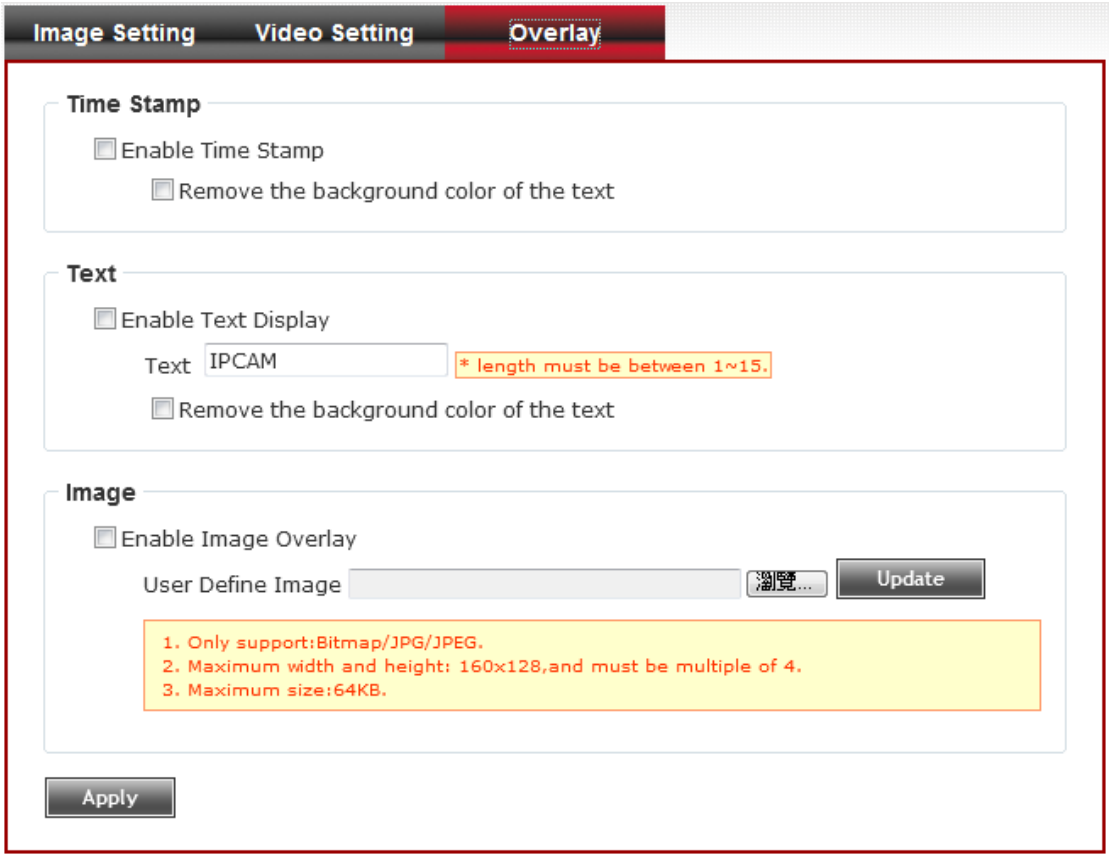

Here are the descriptions of every setup item:

Item	Description
Enable Time Stamp	Check this box to enable overlaying time stamp on video.
Remove the background color of the text (for Time Stamp)	Check this box to remove time stamp's background color. You may find this will help the readability of time stamp text in some cases.
Enable Text Display	Check this box to display certain text on video, this will help when you need to identify certain IP camera when you have a lot of IP cameras. Please input the text in 'Text' field. You can input up to 15 characters.
Remove the background color of the text (Text)	Check this box to remove custom text's background color. You may find this will help the readability of text in some cases.
Enable Image	Check this box to overlay a specific image on video, so you can

Overlay	show certain text / picture on the video and help people to identify this IP camera. Click ‘Browse’ button to pick a picture on your computer, then click ‘Update’ button to use the picture. Please note that there are certain restrictions: - Select .bmp / .jpg / .jpeg image files only. - Image’s resolution should be less than 160 x 128, and can be divided by 4. - Do not upload image files that size is greater than 64KB.

When you finish with above settings, click ‘Apply’ button to save changes.

3-6 Audio

You can adjust audio input / output parameters here.

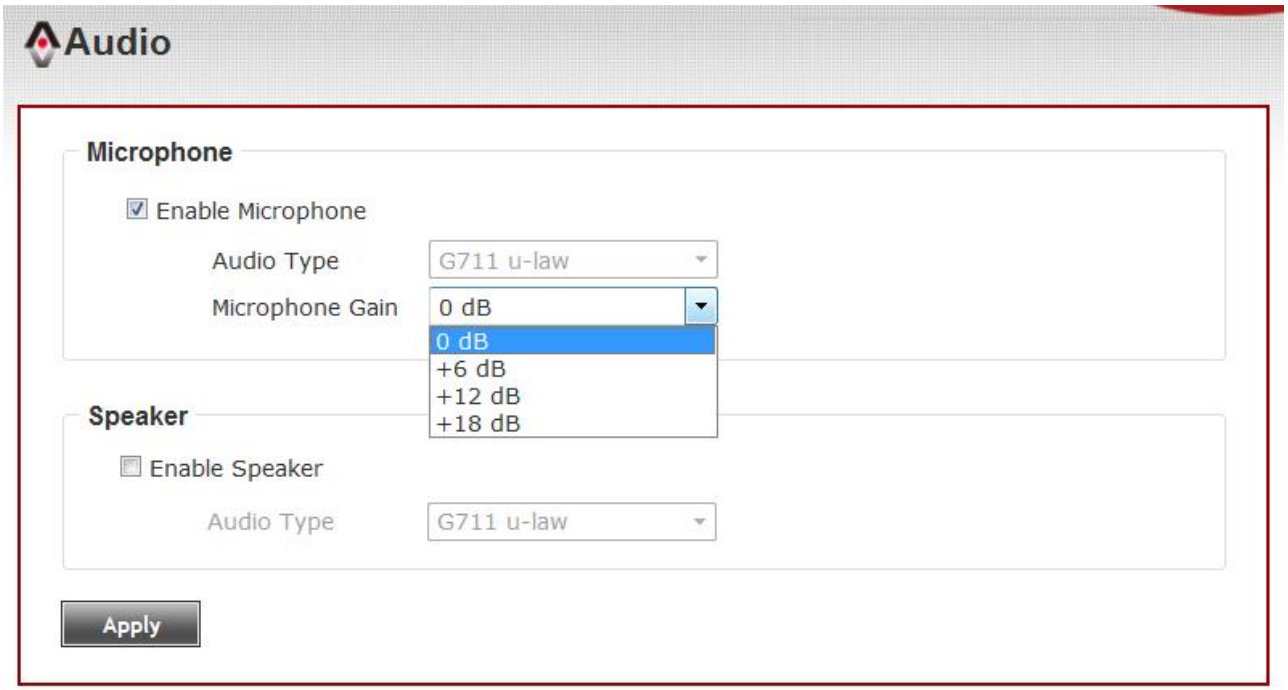

Here are the descriptions of every setup item:

Item	Description
Enable Microphone	Check this box to enable microphone. If you don't want to hear voice from IP camera, you can uncheck this box to disable it.
Audio Type (Microphone)	The format is fixed as G.711
Microphone Gain	If the voice received by microphone is too loud or silent, you can use this function to improve voice volume, so you can hear voice from IP Camera Module more clearly. It provides four modes to adjust the volume, i.e. 0, +6, +12, +18 dB.
Enable Speaker (Speaker)	Check this box to enable speaker. If you don't want people at IP camera to hear you, you can uncheck this box to disable it.
Audio Type (Speaker)	The format is fixed as G.711

When you finish with above settings, click 'Apply' button to save changes.

3-7 Motion

This IP camera is capable to detect object's motion, so IP camera will only record when there's motion and save disk storage space.

Motion detection is performed by examine the movement of objects in rectangular motion detection area. You can define up to 3 motion detection areas.

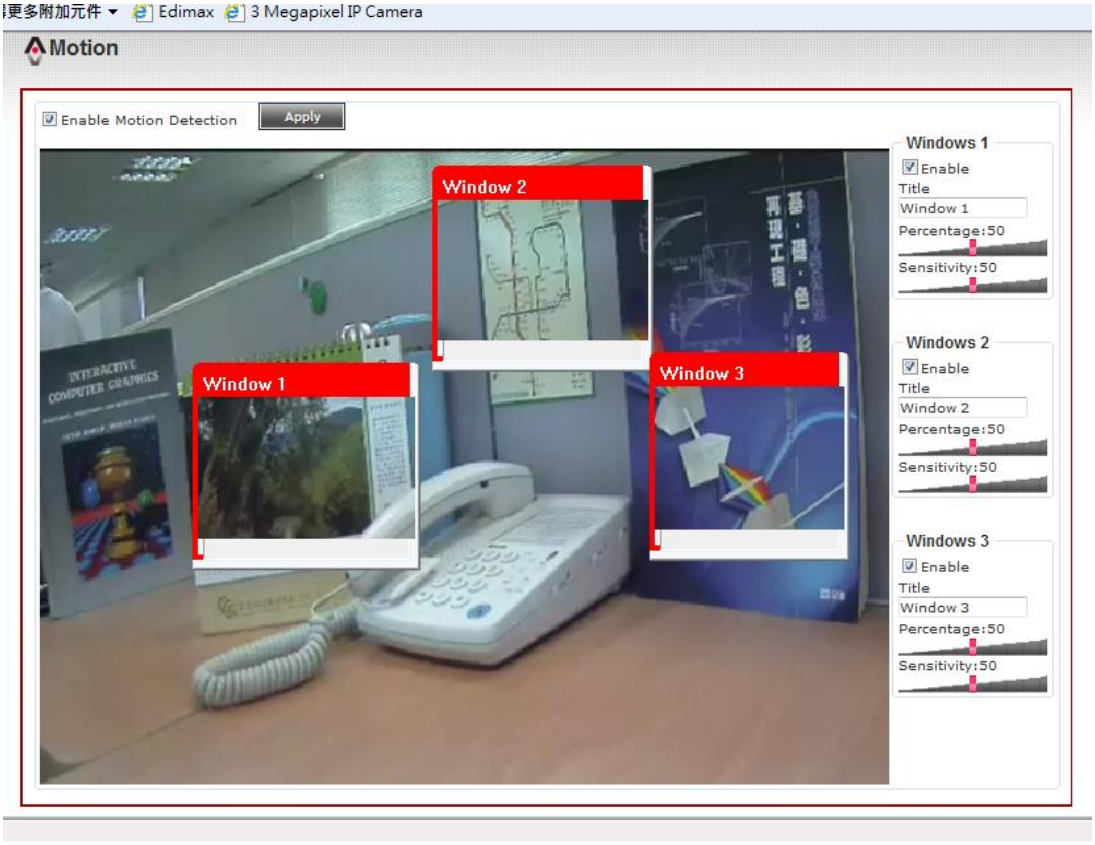

Here are the descriptions of every setup item:

Item	Description
Enable Motion Detection	Check this box to enable motion detection.
Enable (Window 1 to Window 3) 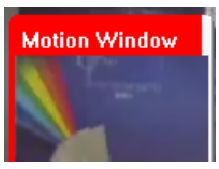 	Check this box to enable this motion detection window. You can select window 1 to 3 to enable up to 3 motion detection windows. When a motion detection window is enabled, a rectangular will appear on camera's view, with its title on the top. - To move / resize a motion detection window: - Move: Use the mouse to drag the title text.

	- Resize: Use the mouse the drag the four corners (upper-left/right, lower-left/right) to resize it. If you only want to adjust width or height, drag the four sidebars (top, bottom, left, and right).
Title (Window 1 to Window 3)	Input characters in title field to change motion detection area's title text so you can identify it. Please note that you have to click 'Apply' button and the text will change.
Percentage	Select the percentage of pixel change that will trigger motion detection alert. Select a lower percentage and you can detect tiny changes in motion detection area.
Sensitivity	Select the sensitivity level that will trigger motion detection alert. Select a higher sensitivity and you can detect tiny changes in motion detection area.

When you finish with above settings, click 'Apply' button to save changes.

3-8 PTZ Control

If you mount the IP camera on pan-tilt camera cradles that support pan-tilt control via RS-485 connection, you can use this function to control pan-tilt camera cradle so you can control the orientation of IP camera from remote place.

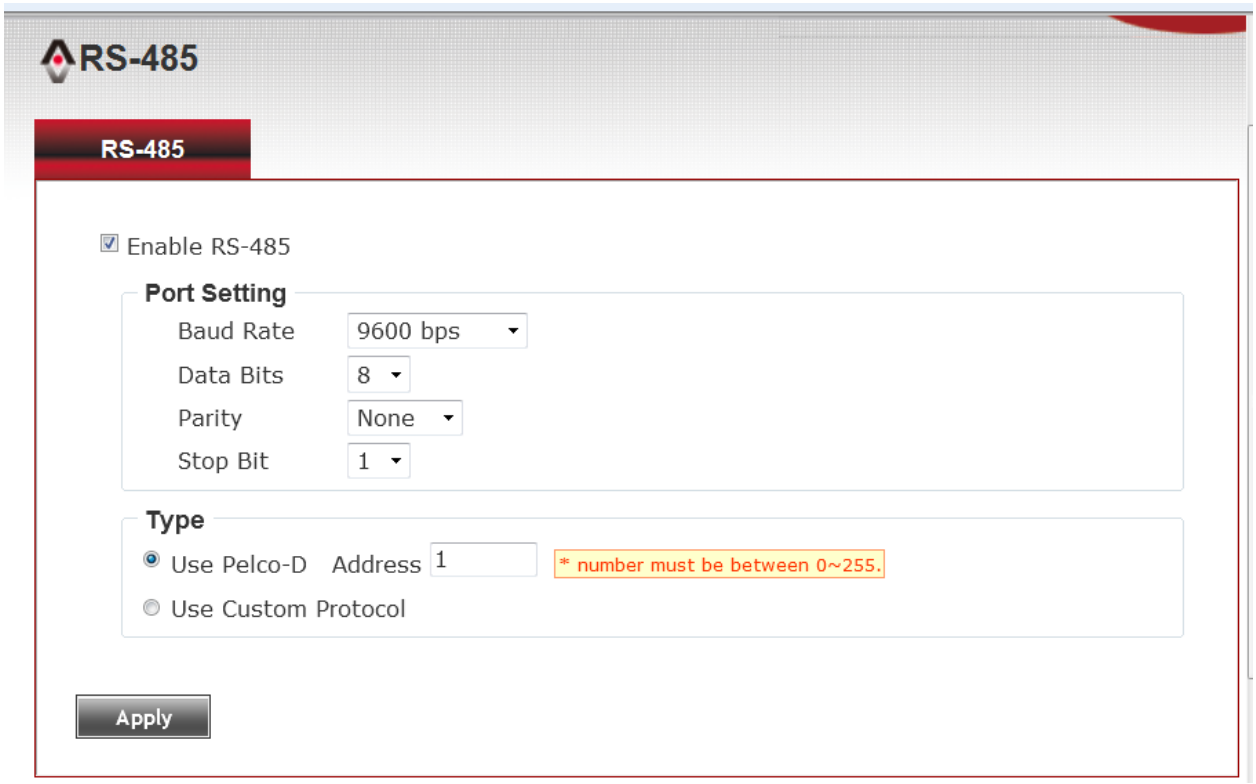

Here are the descriptions of every setup item:

Item	Description
Enable RS-485	Check this box to enable RS-485 functionality.
Use Pelco-D	Select this option and RS-485 interface will output pan-tile control signal in Pelco-D format. This format is widely accepted by most of pan-tilt pan-tilt camera cradles. You have also input pan-tilt camera cradle's address code in 'Address' field. This code must be identical to pan-tilt camera cradle's address code.
Use Custom Protocol	When the pan-tilt camera cradle does not support Pelco-D protocol, you can define a protocol's detail by this function. ***Please refer to pan-tilt camera cradle's user manual to define the protocol.*** - Baud Rate: Select data baud rate of RS-485 interface that pan-tilt camera cradle will accept. When the length of

	RS-485 connection is very long (longer than 200M), it's not recommended to use high speed connection (greater than 2400bps). - Data Bits: Select data bits of RS-485 connection. - Parity: Select parity bit: odd, even, or space. - Stop Bit: Select stop bit: 1 or 2. - Home/Up/Down/Left/Right: Input the command string used to move pan-tilt camera cradle to home or up/down/left/right position. You can click 'Test' button to send command string for testing. - Command 1 ~ 5: You can define extra pan-tilt camera cradle control strings here by giving it a name (Command Name) and command string (Hexadecimal Message). You can also click 'Test' button to send command string for testing.

When you finish with above settings, click 'Apply' button to save changes.

3-9 Event

When there's an event, you can use this setup page to define what IP camera should do, like send an Email or trigger digital output to activate external alarm.

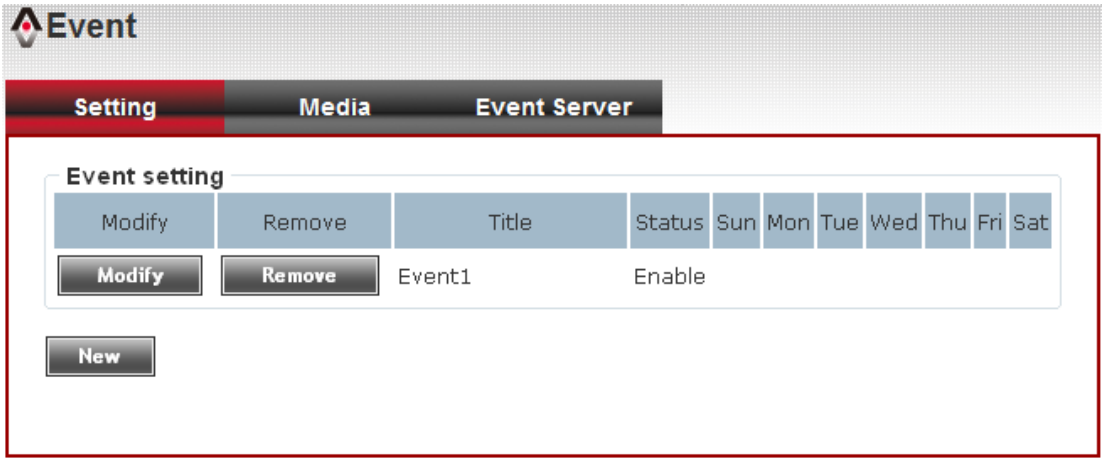

There are three setup pages:

1. Setting: Define a new event and manage events.
2. Media: Define what kind of media file should be saved on designate media.
3. Event Server: Define the details of remote server.

Please refer to following sections for detailed instructions.

3-9-1 Settings

This page lists all existing events. You can click ‘Modify’ button to edit an existing event, or ‘Remove’ to delete an existing event.
To create a new even, just click “New” button to add an Event setting.

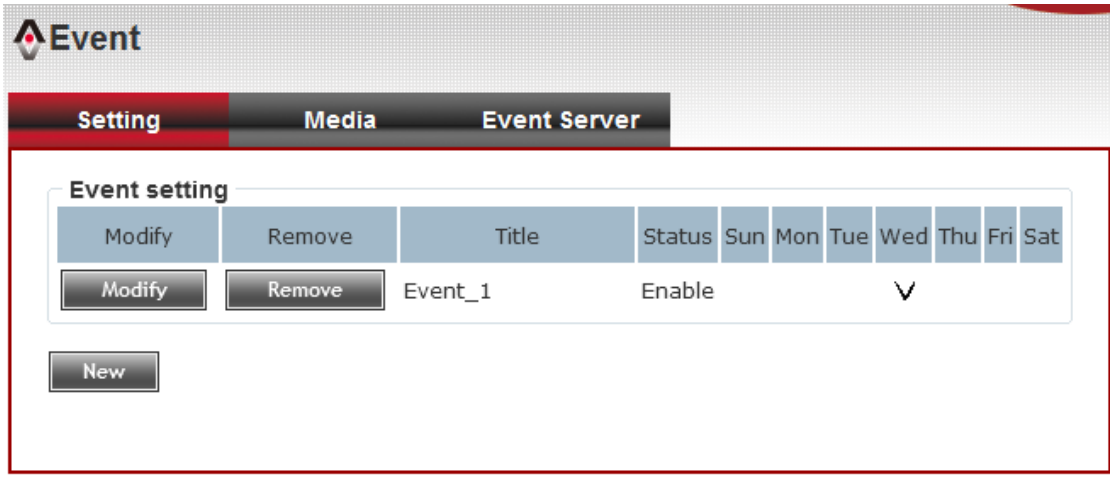

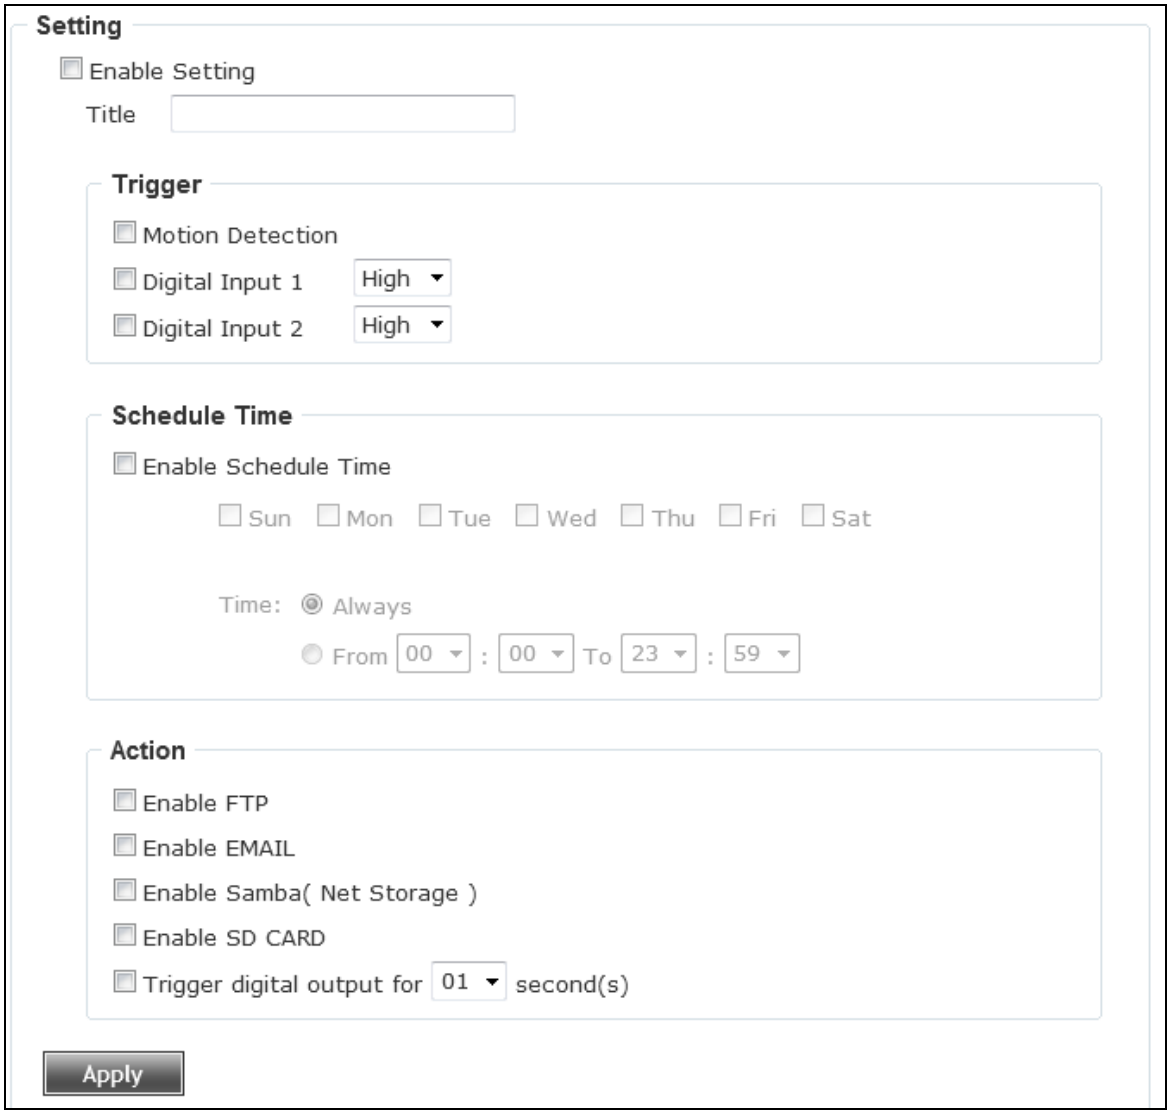

To add a new event, click ‘New’ button and the descriptions of every setup item is listed below:

Item	Description
Enable Setting	Check this box to enable this event. If you just want to disable this event temporarily, you can uncheck this box to keep this event and disabling while not deleting it.
Title	Input any description text for this event so you can identify it quickly. You can use alphabets, numbers, and symbols include: !$-.@^_~ (no spaces allowed).
Motion Detection	Check this box and this event will be activated when one of motion detection window detects motion.
Digital Input 1 Digital input 2	Check this box and this event will be activated when digital input 1’s input signal is high or low (select from dropdown list).
Enable Schedule Time	Check this box and this event will be activated when designated weekday and time is reached. You also have to check weekday box, and select time from dropdown list. If you select ‘Always’ as time, this event will be activated during all the day.
Enable FTP	Check this box and IP camera will save file on FTP server (refer to ‘FTP Server’ setting in ‘Event Server’ tab) when this event is activated.
Enable EMAIL	Check this box and IP camera will send an Email to designated recipient address (refer to ‘SMTP Server’ setting in ‘Event Server’ tab) when this event is activated.
Enable Samba (Net Storage)	Check this box and IP camera will save file on samba server (refer to ‘Samba Server’ setting in ‘Event Server’ tab) when this event is activated.
Enable SD CARD	Check this box and IP camera will save file on SD card when this event is activated. A working SD card must be inserted into IP camera in advance.
Trigger digital output for xx second(s).	Check this box and IP camera will trigger digital out to ‘high’ state for xx seconds when this event is activated, where ‘xx’ seconds must be defined by the dropdown list.

3-9-2 Media

You can define what kind of media file should be saved on designated media.

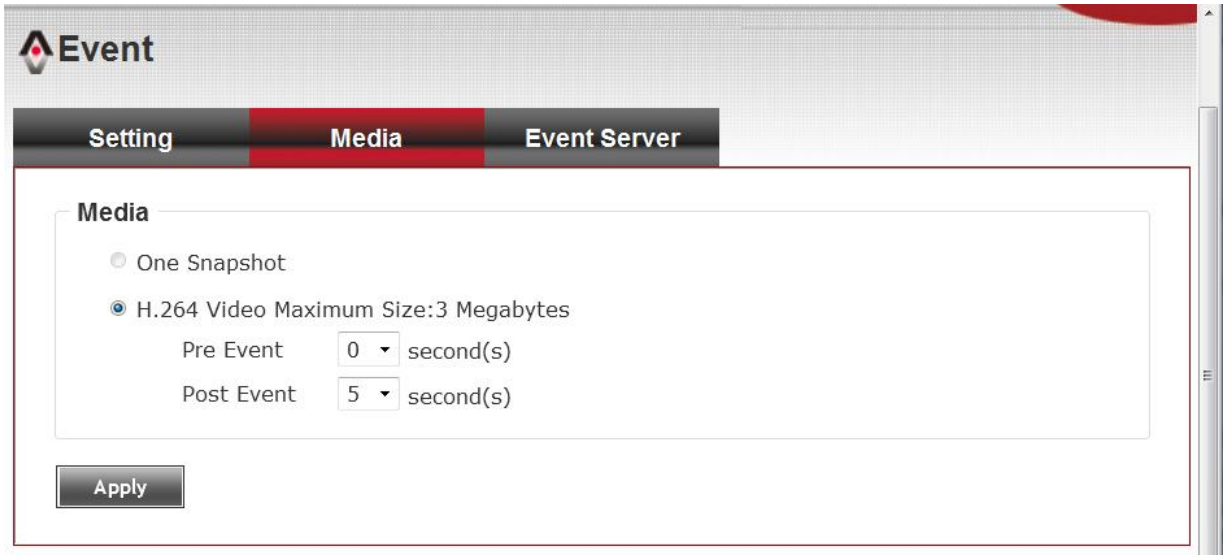

Here are the descriptions of every setup item:

Item	Description
One Snapshot	Save a picture file when event is triggered.
H.264 Video	Save a H.264 video clip. You can also select the recording length before and / or after the time when event is triggered in 'Pre Event' and 'Post' Event'. For example, if you set 'Pre Event' to '5' and 'Post Event' to 5', and an event is triggered at 14:10:30, then the video file will be 10 seconds long, starting from 14:10:25 to 14:10:35. ***Tips: You may want to know what happened before event is triggered in many cases, especially when object is outside of motion detection window.*** ***Note: If the "Pre Event" set to "0" second, the "Post Event" cannot set to "0" second.***

When you finish with above settings, click 'Apply' button to save changes.

3-9-3 Event Server

You can define the details of remote media server: FTP (File), SMTP (Email), and Samba (File).

A Samba server can be any computer running windows operating system with network neighbor function enabled. Many stand-alone network file server also support samba server function.

Enable FTP server then it will show the related items of FTP server setting.

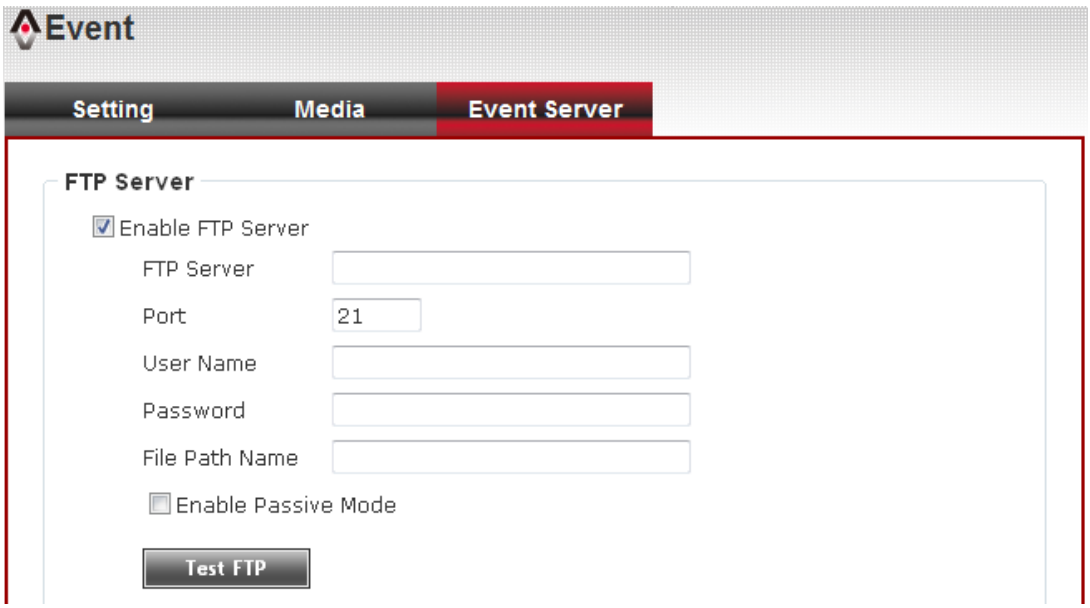

Here are the descriptions of every setup item:

Item	Description
Enable FTP Server	Check this box to enable FTP server upload. - FTP Server: Input FTP server's IP address or hostname. - Port: Input FTP server's port number. In most cases it should be default value '21'. - User Name: Input FTP server's username. - Password: Input FTP server's password. - File Path Name: Input the path where you want to save file on FTP server, like 'upload/record'. If you want to save file on this FTP user's home directory, you can leave this field blank. - Enable Passive Mode: Check this box to force IP camera to communicate with FTP server in passive mode (Some FTP Server may only work when you check this box, while others don't). - Test FTP: Click this button to test FTP server settings above immediately.

Enable SMTP Server then UI shows the items as below.

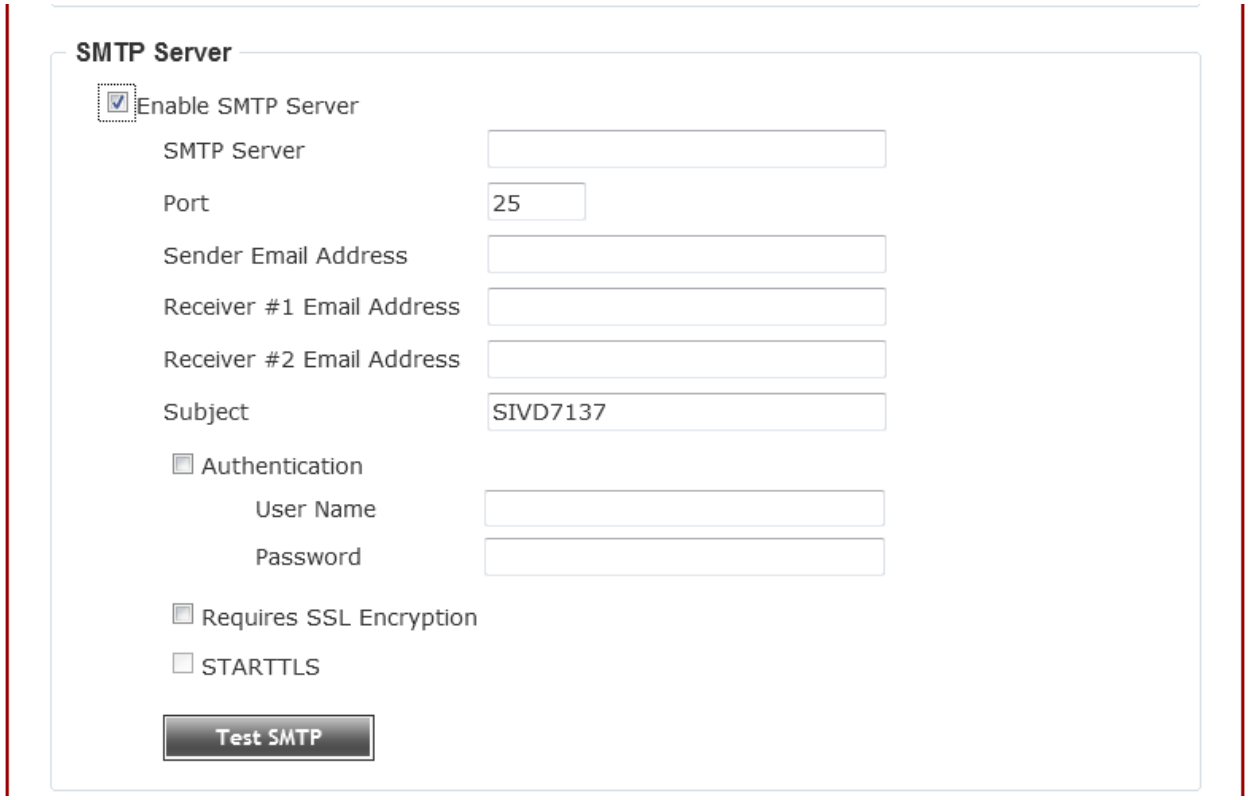

Item	Description

SMTP Server	Check this box to enable Email send. - SMTP Server: Input SMTP server's IP address or hostname. - Port: Input SMTP server's port number. In most cases it should be default value '25'. - Sender Email Address: Input the sender's email address that will appear in the Email send by IP camera. This will help you to identify the Email sent by this IP camera, and may help when you have anti-spam software installed (you can set this Email address to 'White List' in your anti-spam software) - Receiver #1 Email Address: Input primary recipient's Email address. This field is required. - Receiver #2 Email Address: Input backup recipient's Email address. This field is optional. - Subject: Input Email title that will appear in the Email send by IP camera. This will help you to identify the Email sent by this IP camera. - Authentication: Check this box when authentication is required by the Email server you're using. You also need to input Email server's username and password in corresponding field. - Requires SSL Encryption: If your Email server required SSL encryption, check this box. Please note that some Email server uses different port number than standard port 25 when SSL encryption is used. - STARTTLS: If your Email server required STARTTLS encryption, check this box. Please note that some Email server uses different port number than standard port 25 when STARTTLS encryption is used. - Test SMTP: Click this button to test SMTP server settings above immediately.

Enable SMTP Server then UI shows the items as below.

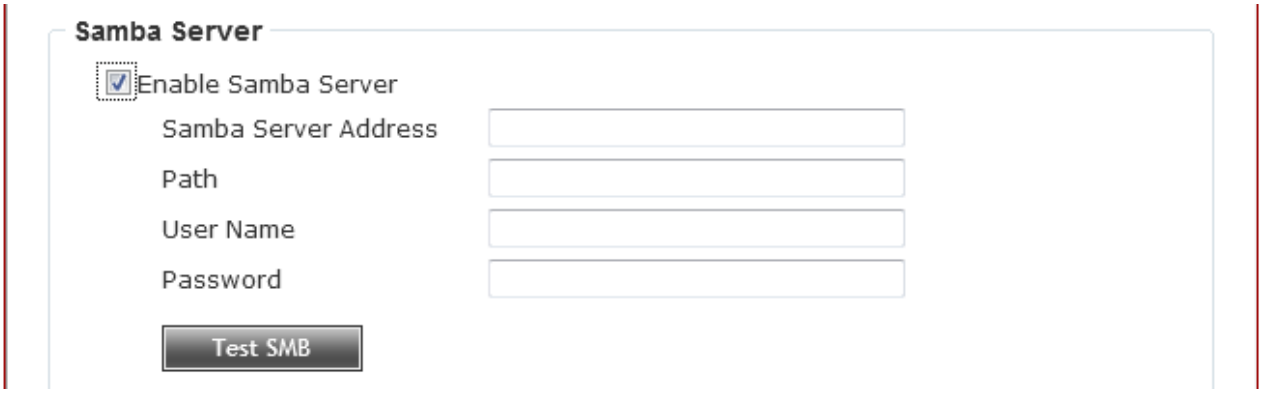

Item	Description
Samba Server	Check this box to enable Samba server file upload. - Samba Server Address: Input Samba server's IP address or hostname. - Path: Input the path where you want to save file on Samba server, like 'upload/record'. If you want to save file on this user's home directory, you can leave this field blank. - User Name: Input Samba server's username. - Password: Input Samba server's password. * Username and password can NOT leave blank.* - Test SMB: Click this button to test Samba server settings above immediately. ***Tips: Some samba server does not have username and password check, you can just input samba server address and path to access the file storage space.***

When you finish with above settings, click 'Apply' button to save changes.

3-10 Recording to Micro SD Card

When a Micro SD card is inserted into IP camera, you can save video files on it.

Note:

1. ***Be sure that the Micro SD Card format should be FAT32. The NTFS format cannot be supported by this camera.***
2. ***Unlink motion detection; this function will record video at specified time period on selected weekday(s).***

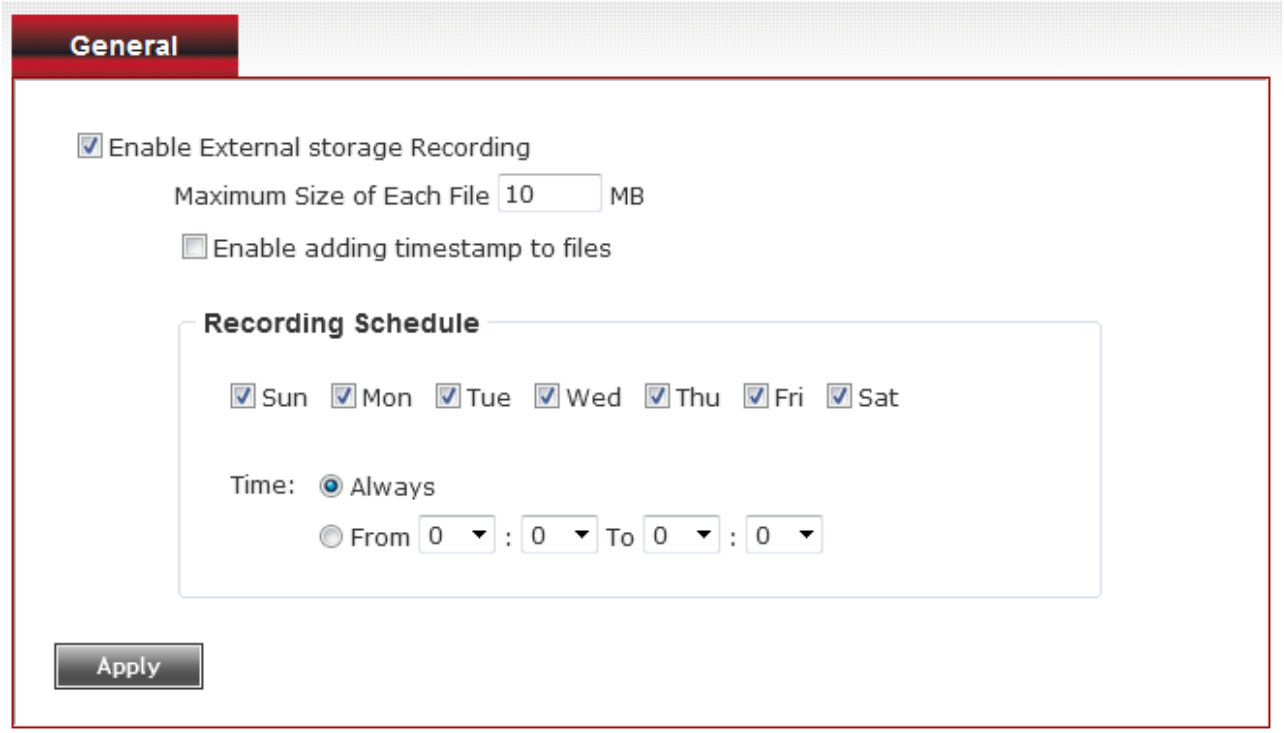
General
Enable External storage Recording
Maximum Size of Each File 10 MB
Enable adding timestamp to files
Recording Schedule
Sun Mon Tue Wed Thu Fri Sat
Time: Always
From 0 : 0 To 0 : 0
Apply

Here are the descriptions of every setup item:

Item	Description
Enable External storage Recording	Check this box to record video on SD card.
Maximum Size of Each File	Input the maximum size of every video file from 1MB to 50MB. IP camera will start a new video file when a recording video file reaches the size limit stated here.
Recording Schedule	Define the recording schedule. You can check Sun to Sat boxes to represent a weekday, and specify time period in 'From' and 'To' field. Select 'Always' to record 24 hours in selected weekday(s).

When you finish with above settings, click 'Apply' button to save changes.

3-11 SDHC

The IP camera has an optional Micro-SD card slot. The UI shows the capacity is 0 MB when the module without Micro-SD card slot and memory card.

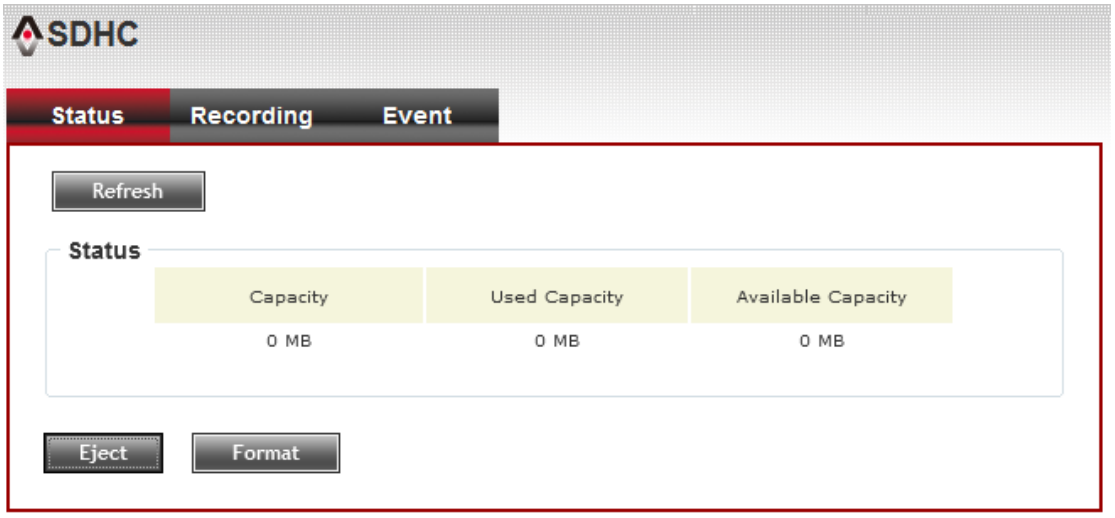

If you need the function please check the option when you place the order of the IP camera module.

Once the SD card is inserted, the UI will show the capacity of the Micro-SD card like the image hereunder.

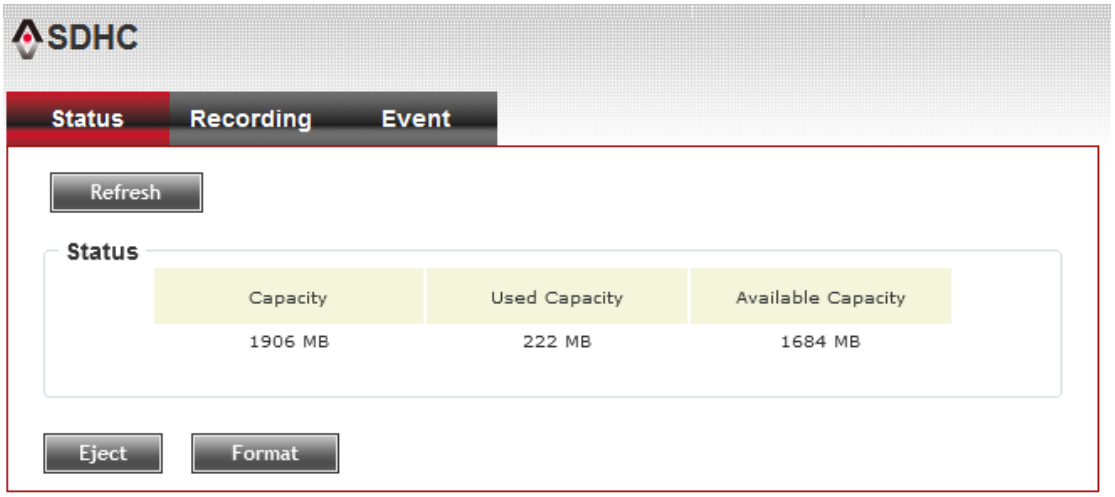

There are two UI pages to show the record on the Micro-SD card. They are mapping to the setting of “Recording to SD card” and “Event” accordingly. Click “All file” to list all files. You also can define the range and click “Search” to sort the files needed. It shows likes the images in the next page.

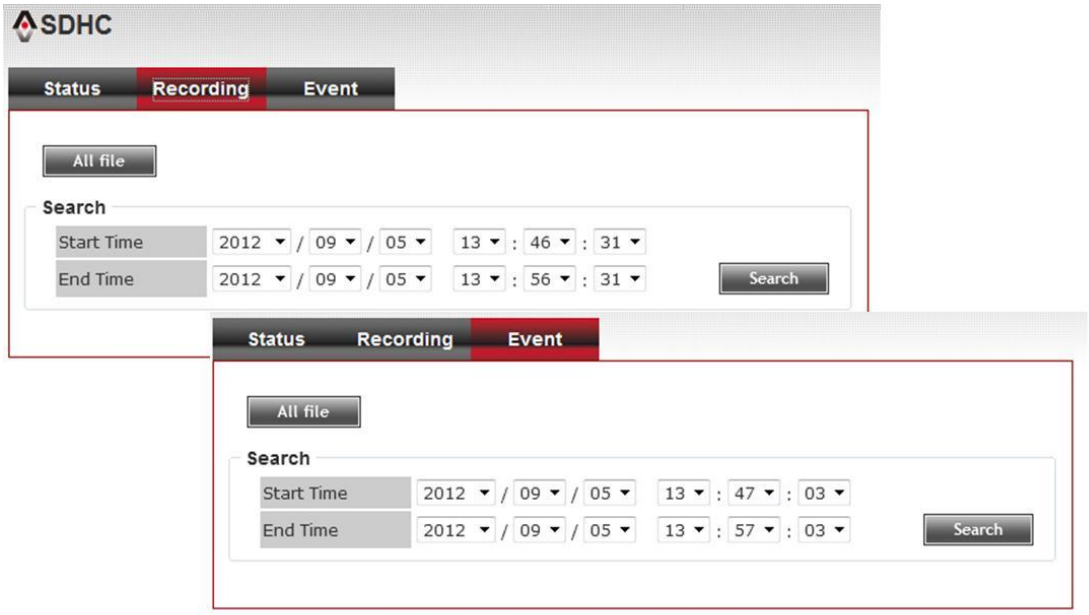

Set the time range then click “Search” then shows the records like below.

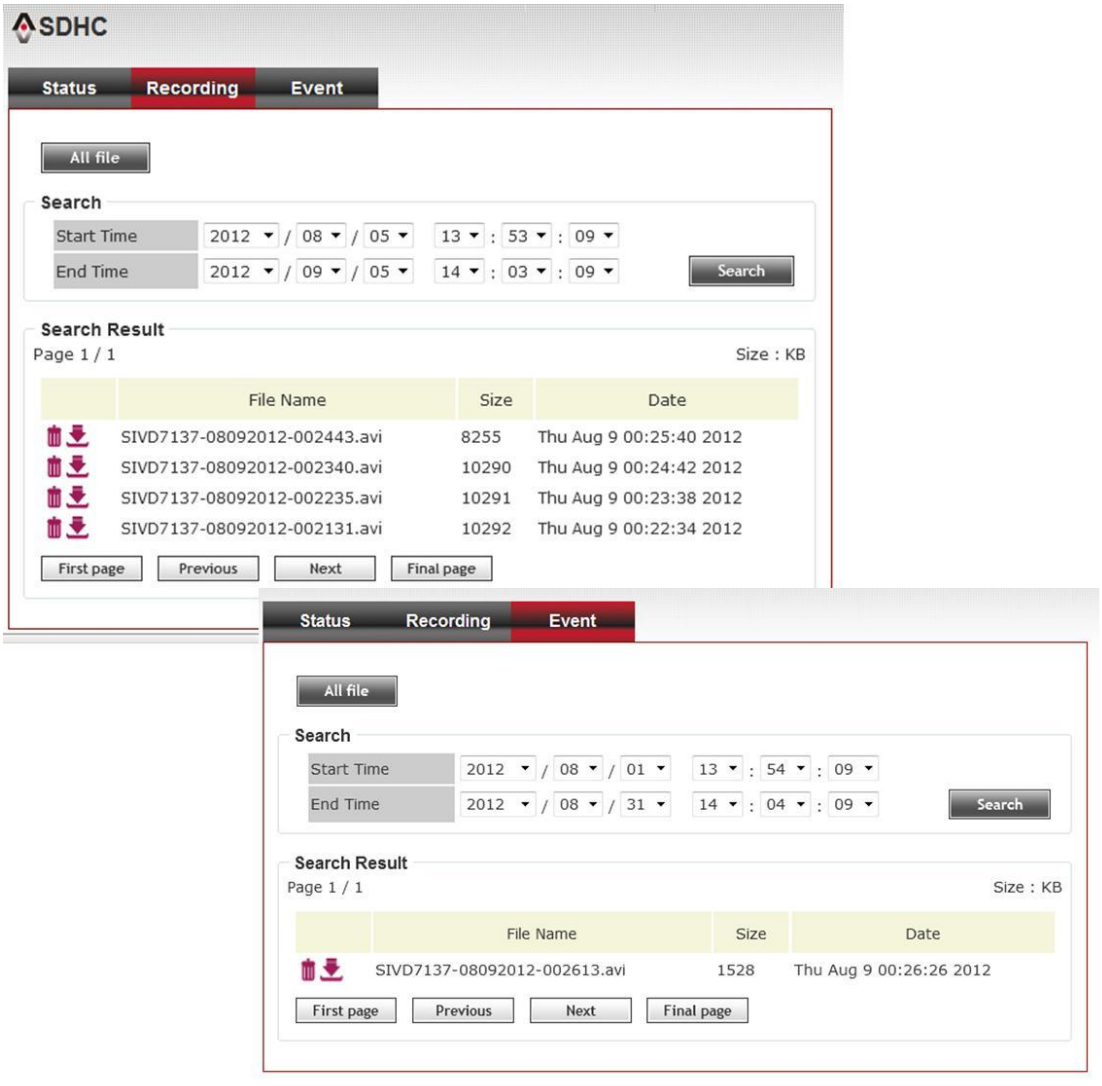

3-12 Log

You can check the usage log of IP camera here.

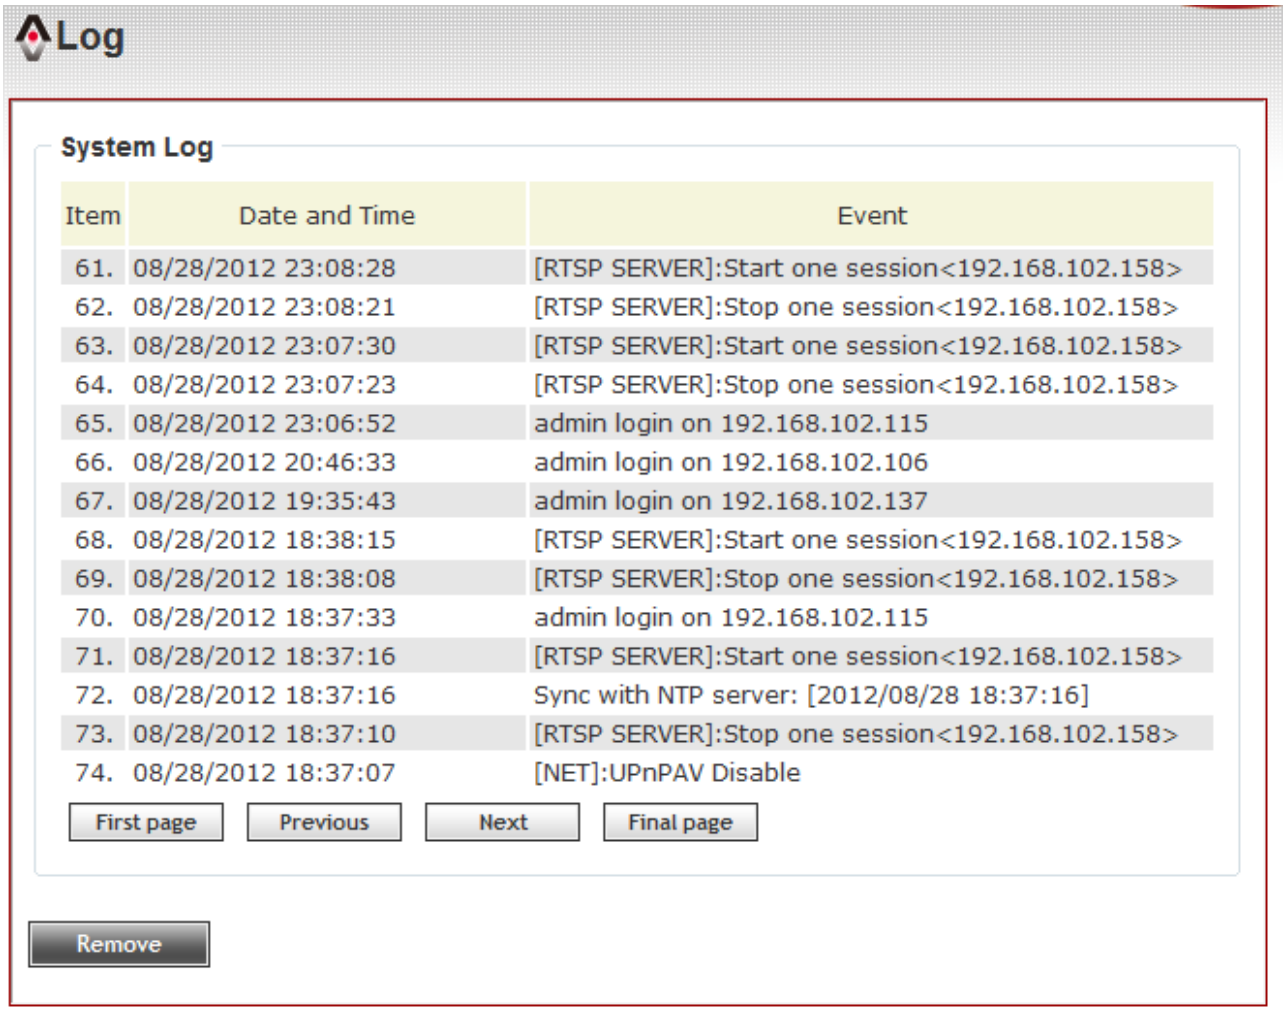

In this page, you can click:

1. First page / Final page: Jump to first / final page of log.
2. Previous / Next: Jump to previous or next page of log.
3. Remove: Clear log. You'll be prompted for confirmation.

3-13 Device Info

You can check the information and network settings of this IP camera. These information are very useful when you need to repair or fix the problem of this IP camera.

An example of device info page looks like this:

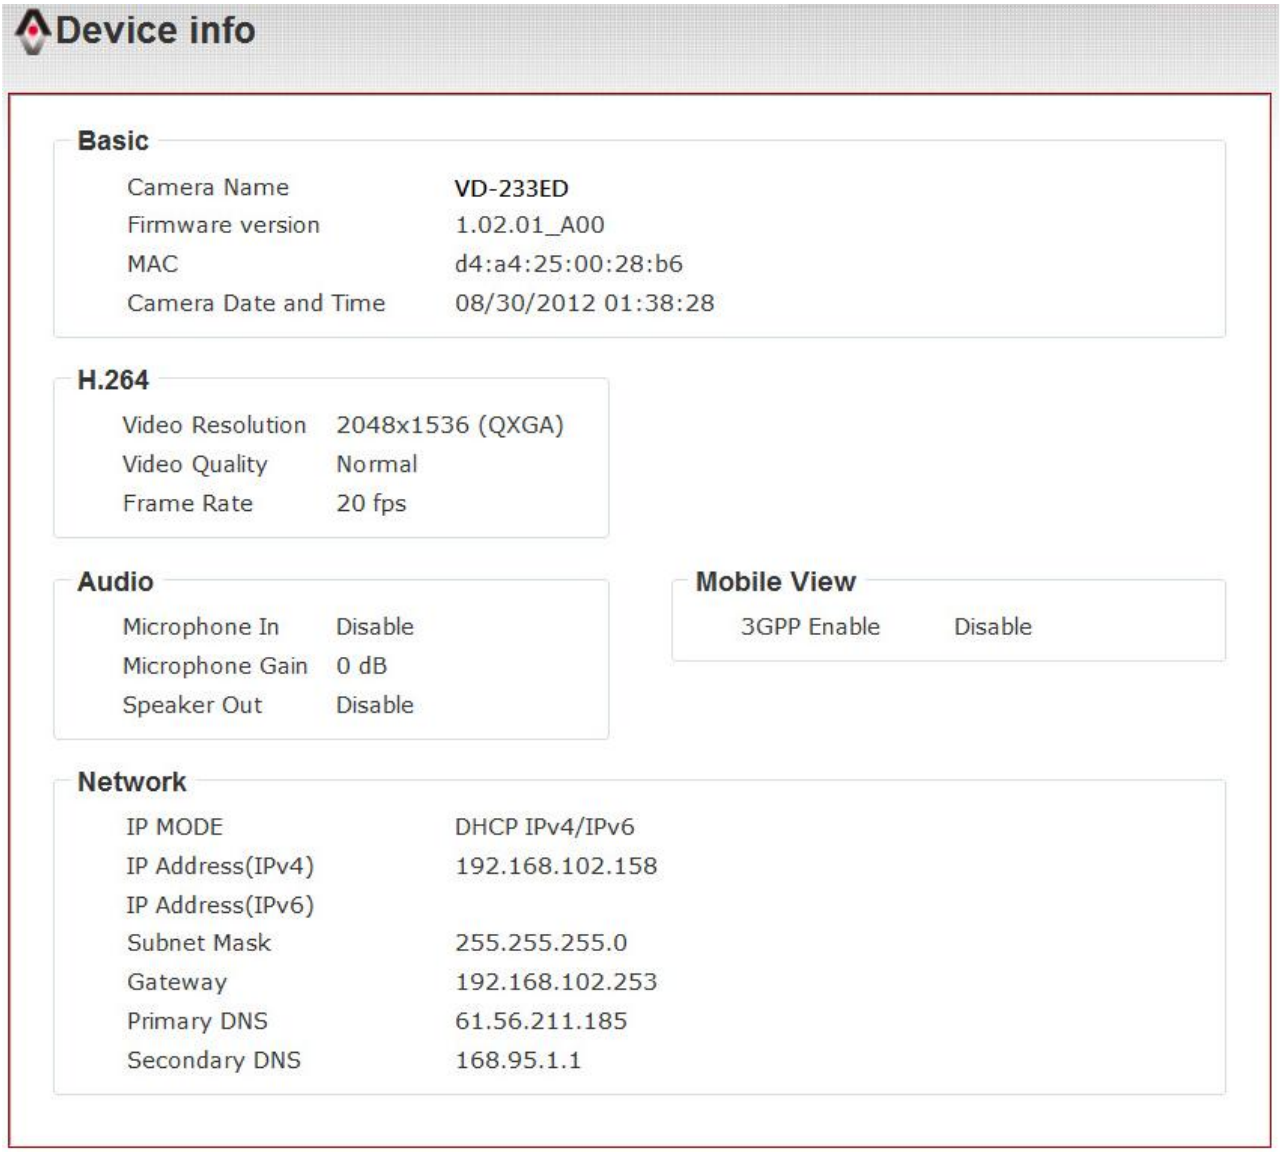

3-14 Maintenance

You can do some maintenance job about this IP camera here.

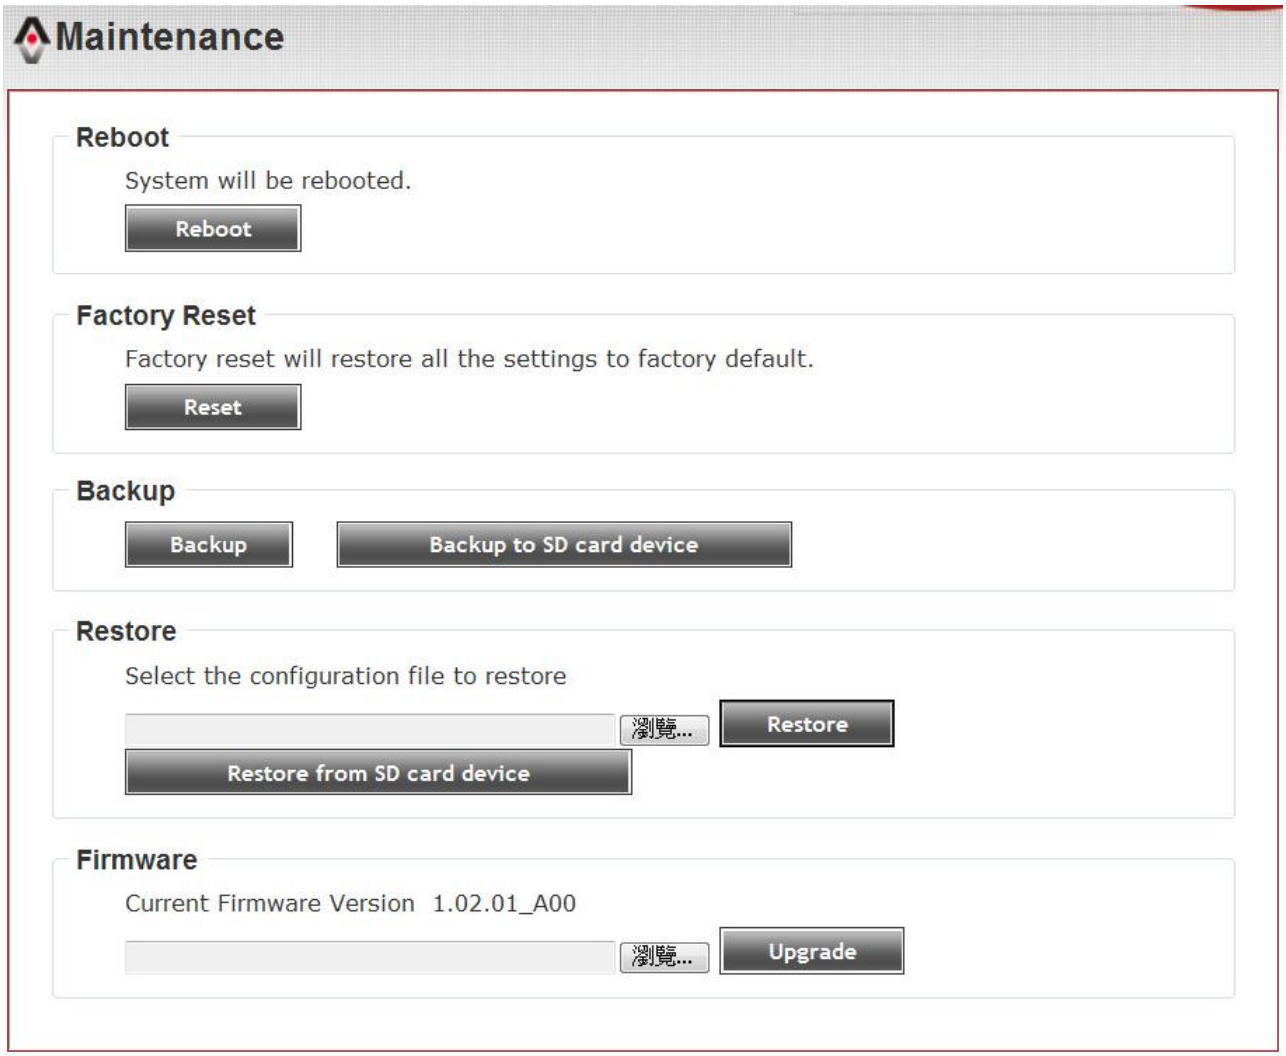

Here are the descriptions of every setup item:

Item	Description
Reboot	Click this button to reboot the IP camera. This function is useful when you find IP camera is not working properly.
Reset	Clear all settings of IP camera and reset to factory default setting.
Backup	Backup IP camera's setting and save it on your computer.
Backup to Micro SD card device	Backup IP camera's setting and save it on Micro SD card. A Micro SD card must be inserted into Micro SD card slot when you click this button, or you'll receive an error message.
Restore	Restore a previously-saved configuration file saved on your computer. Click 'Browse' button to select a file on your computer first, then click 'Restore' button.
Restore from	Restore IP camera's configuration which is previously-saved on

SD card device	SD card.
Upgrade	Upgrade IP camera's firmware. Click 'Browse' button to select a firmware image file on your computer first, then click 'Upgrade' button.

3-15 Language

You can change the display language of web interface.

Click 'Language' button and select one language. More languages may available in latest firmware file.

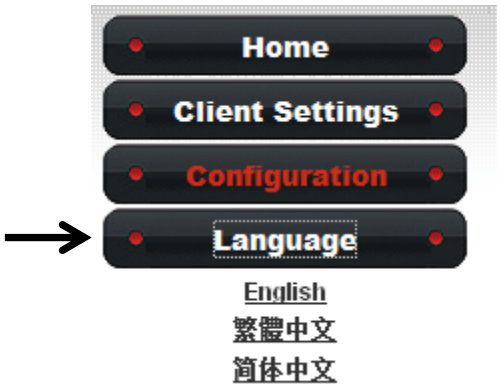

Chapter V Troubleshooting

Please don't panic when you found this IP Camera is not working properly. Before you send this IP Camera back to us, you can do some simple checks to save your time:

Problem description	**Possible solution(s)**
Can't connect to IP Camera	1) Please check the IP address of IP Camera again. 2) Please make sure the network cable is correctly connected to your local area network. 3) Please make sure power cable is correctly connected to IP Camera. 4) Please make sure IP Camera is switched on (the LED lights on IP Camera will light up).
No IP Camera found	1) 'Auto search' function only works on IP Cameras located on local area network.
No image	1) If the place where IP camera is installed is too dark, try to add some lights when possible. 2) Check if there's anything covering the lens.
RTSP URL	1) Main Stream (H.264/MPEG4) **RTSP://IP address :RTSP port/stream1** 2) MJPEG **RTSP://IP address :RTSP port/stream2** 3) Mobile View **RTSP://IP address :RTSP port/mobile**

Digital I/O User Manual

DI/DO connector – Use in applications for e.g. motion detection, event triggering, SD recording and alarm notifications via FTP/EMAIL/SAMBA.

•Digital output — For connecting external devices such as relays, alarm bell or LEDs. Connected devices can be activated by the Configuration→Event interface or digital output buttons on the Home page.

Pin	Notes	Specifications
	Trigger is “Off”, DO connect to GND Trigger is “On”, DO is floating	Max load: 30mA,30VDC

Please refer to the following illustration for DO connection method

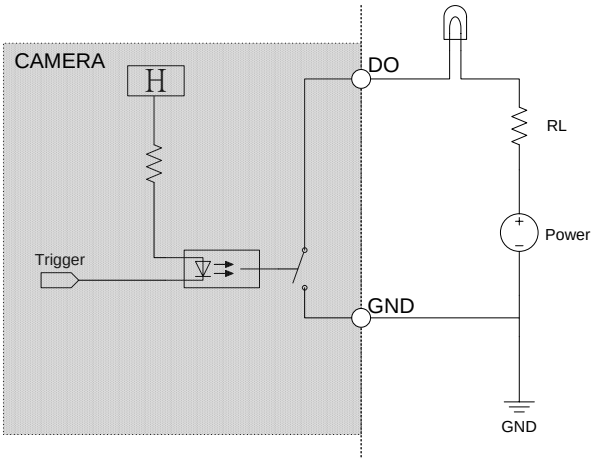

•Digital input — An alarm input for connecting devices that can toggle between an open and closed circuit, for example: PIRs, door/window contacts, glass break detectors, etc. When a signal is received the state changes and the input becomes active.

Pin	Notes	Specifications
	DI is floating, trigger is “high” DI is high, trigger is “low”	Max current input: 30mA

Please refer to the following illustration for DI connection method

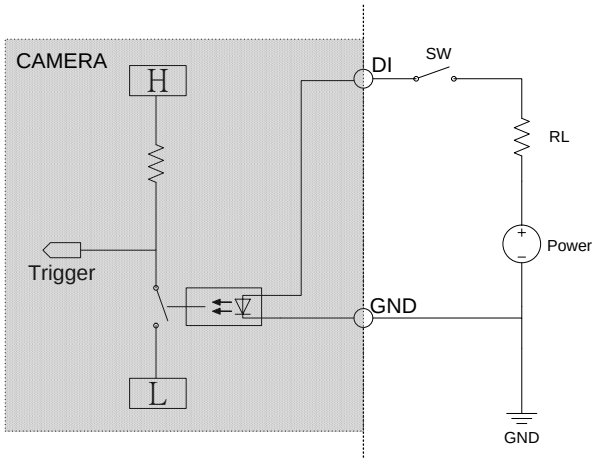

Suggested Component Value

Power(VDC)	RL(Ω)
3.3V	100Ω
5V	200Ω
12V	510Ω

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

FCC Caution

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.

Federal Communications Commission (FCC) Radiation Exposure Statement

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 2.5cm (1 inch) during normal operation.

Federal Communications Commission (FCC) RF Exposure Requirements

SAR compliance has been established in the laptop computer(s) configurations with PCMCIA slot on the side near the center, as tested in the application for certification, and can be used in laptop computer(s) with substantially similar physical dimensions, construction, and electrical and RF characteristics. Use in other devices such as PDAs or lap pads is not authorized. This transmitter is restricted for use with the specific antenna tested in the application for certification. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

R&TTE Compliance Statement

This equipment complies with all the requirements of DIRECTIVE 1999/5/EC OF THE EUROPEAN PARLIAMENT AND THE COUNCIL of March 9, 1999 on radio equipment and telecommunication terminal equipment and the mutual recognition of their conformity (R&TTE). The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

EU Countries Intended for Use

The ETSI version of this device is intended for home and office use in Austria, Belgium, Bulgaria, Cyprus, Czech, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Turkey, and United Kingdom. The ETSI version of this device is also authorized for use in EFTA member states: Iceland, Liechtenstein, Norway, and Switzerland.

EU Countries Not Intended for Use
None

EU Declaration of Conformity

English: This equipment is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC.

French: Cet équipement est conforme aux exigences essentielles et autres dispositions de la directive 2004/108/EC.

Czechian: Toto zařízení je v souladu se základními požadavky a ostatními příslušnými ustanoveními směrnic 2004/108/EC.

Polish: Urządzenie jest zgodne z ogólnymi wymaganiami oraz szczególnymi warunkami określonymi Dyrektywą UE 2004/108/EC.

Romanian: Acest echipament este în conformitate cu cerinţele esenţiale şi alte prevederi relevante ale Directivei 2004/108/EC.

Russian: Это оборудование соответствует основным требованиям и положениям Директивы 2004/108/EC.

Magyar: Ez a berendezés megfelel az alapvető követelményeknek és más vonatkozó irányelveknek 2004/108/EC.

Türkçe: Bu cihaz 2004/108/EC direktifleri zorunlu istekler ve diğer hükümlerle ile uyumludur.

Ukrainian: Обладнання відповідає вимогам і умовам директиви 2004/108/EC.

Slovakian: Toto zariadenie spĺňa základné požiadavky a ďalšie príslušné ustanovenia smerníc 2004/108/EC.

German: Dieses Gerät erfüllt die Voraussetzungen gemäß den Richtlinien 2004/108/EC.

Spanish: El presente equipo cumple los requisitos esenciales de la Directiva 2004/108/EC.

Italian: Questo apparecchio è conforme ai requisiti essenziali e alle altre disposizioni applicabili della Direttiva 2004/108/EC.

Dutch: Dit apparaat voldoet aan de essentiële eisen en andere van toepassing zijnde bepalingen van richtlijn 2004/108/EC.

Portugese: Este equipamento cumpre os requesitos essênciais da Directiva 2004/108/EC.

Norwegian: Dette utstyret er i samsvar med de viktigste kravene og andre relevante regler i Direktiv 2004/108/EC.

Swedish: Denna utrustning är i överensstämmelse med de väsentliga kraven och övriga relevanta bestämmelser i direktiv 2004/108/EC.

Danish: Dette udstyr er i overensstemmelse med de væsentligste krav og andre relevante forordninger i direktiv 2004/108/EC.

Finnish: Tämä laite täyttää direktiivien 2004/108/EC oleelliset vaatimukset ja muut asiaankuuluvat määräykset.

FOR USE IN AT BE CY CZ DK EE FI FR DE GR HU IE IT LV LT LU MT NL PL PT SK SI ES SE GB IS LI NO CH BG RO TR

CE FC *N20379*

WEEE Directive & Product Disposal

At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

Declaration of Conformity

We, Edimax Technology Co., Ltd., declare under our sole responsibility, that the equipment described below complies with the requirements of the European EMC directive (2004/108/EC).

Equipment: **Vandal Dome IP Camera**
Model No.: **VD-233ED**
Report No.: **T120815D05-E**

The following European standards for essential requirements have been followed:

EN 55022:2006+A1: 2007 +A2:2010 (Class A)
CISPR 22: 2008 (Ed 6.0)
AS/NZS CISPR 22: 2009
EN61000-3-2:2006 +A1: 2009+A2: 2009
EN61000-3-3:2008
EN 55024:2010
(IEC61000-4-2:2008
IEC 61000-4-3:2006 +A1:2007+A2: 2010
IEC 61000-4-4:2004+A1:2010
IEC 61000-4-5:2005
IEC 61000-4-6:2008
IEC 61000-4-8:2009
IEC 61000-4-11: 2004)

Edimax Technology Co., Ltd.
No. 3, Wu Chuan 3rd Road,
Wu-Ku Industrial Park,
New Taipei City, Taiwan

Date of Signature: October, 2 7, 2012
Signature:

Printed Name: Albert Chang
Title: Director
Edimax Technology Co., Ltd.

Notice According to GNU General Public License Version 2

This product includes software that is subject to the GNU General Public License version 2. The program is free software and distributed without any warranty of the author. We offer, valid for at least three years, to give you, for a charge no more than the costs of physically performing source distribution, a complete machine-readable copy of the corresponding source code.

Das Produkt beinhaltet Software, die den Bedingungen der GNU/GPL-Version 2 unterliegt. Das Programm ist eine sog. „Free Software“, der Autor stellt das Programm ohne irgendeine Gewährleistungen zur Verfügung. Wir bieten Ihnen für einen Zeitraum von drei Jahren an, eine vollständige maschinenlesbare Kopie des Quelltextes der Programme zur Verfügung zu stellen – zu nicht höheren Kosten als denen, die durch den physikalischen Kopiervorgang anfallen.

GNU GENERAL PUBLIC LICENSE
Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA
Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation’s software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author’s protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors’ reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone’s free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The ‘“Program’“, below, refers to any such program or work, and a ‘“work based on the Program’“ means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term ‘“modification’“.) Each licensee is addressed as ‘“you’“.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program’s source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and ‘“any later version’“, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM ‘“AS IS’“ WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

EDIMAX
NETWORKING PEOPLE TOGETHER

www.edimax.com

Edimax Technology Co., Ltd.
No.3, Wu-Chuan 3rd Road, Wu-Gu,
New Taipei City 24891, Taiwan

Edimax Technology Europe B.V.
Nijverheidsweg 25 5683 CJ Best
The Netherlands

Edimax Computer Company
3350 Scott Blvd., Bldg.15 Santa Clara,
CA 95054, USA